
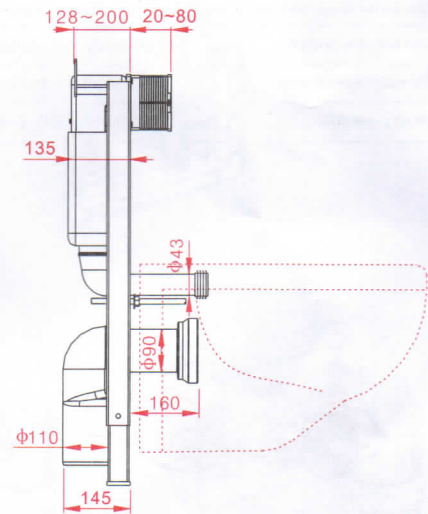
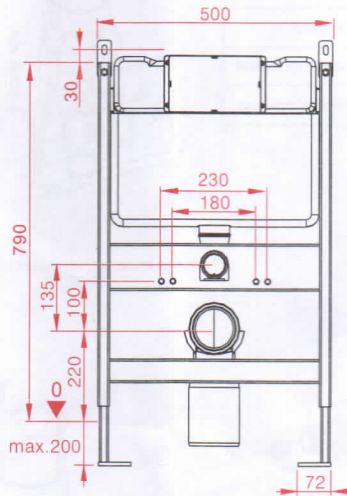





Instruction Manual of Front Concealed Cistern Install With Wall Hung Toilet

1. Technologic data


KAI-WHF001

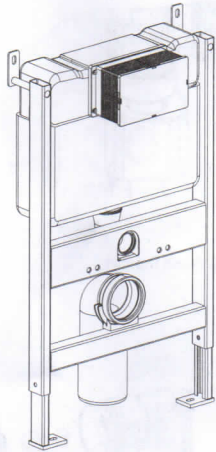










2. Install parameter

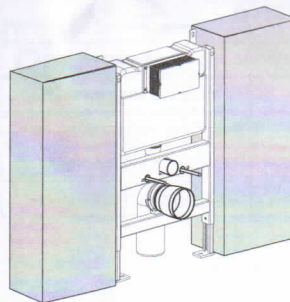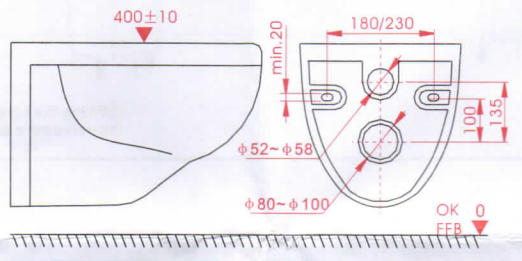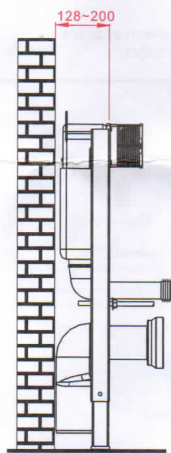


3. Install Ways

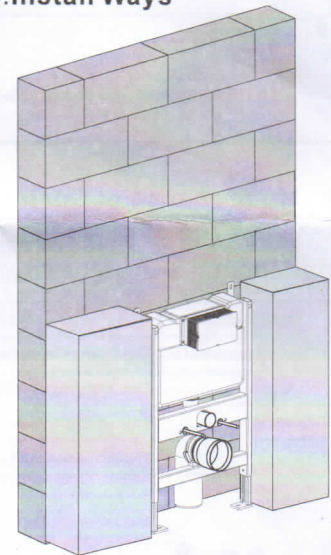


4. Fixing the frame

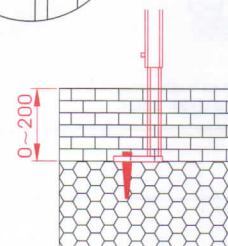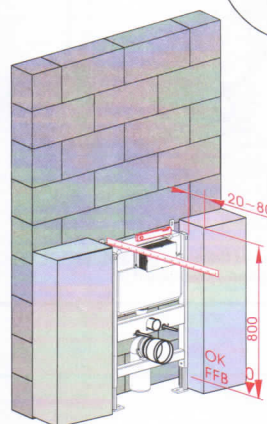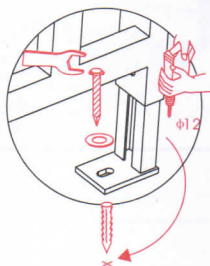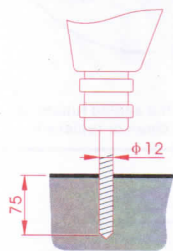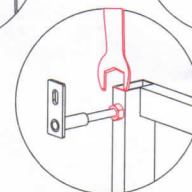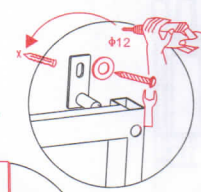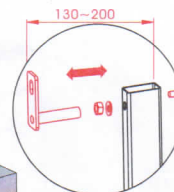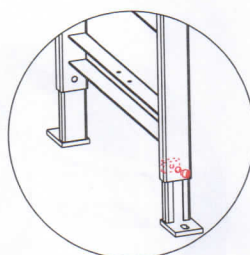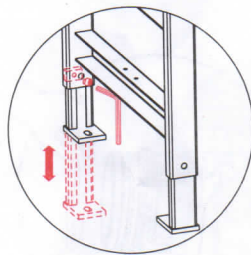


5. Fixing the fill pipe and flush pipe

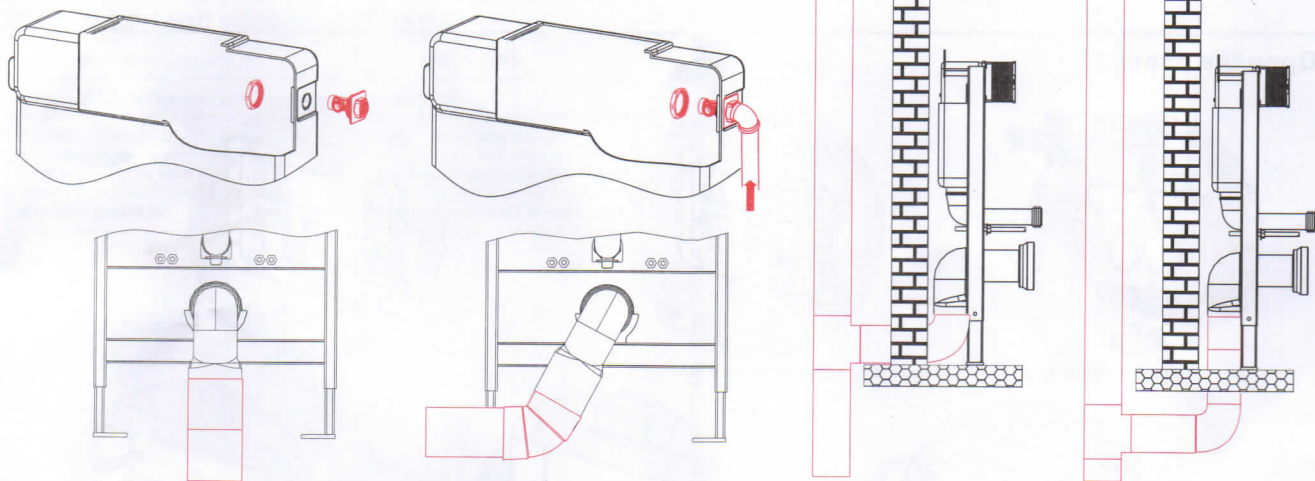


6. Build the wall

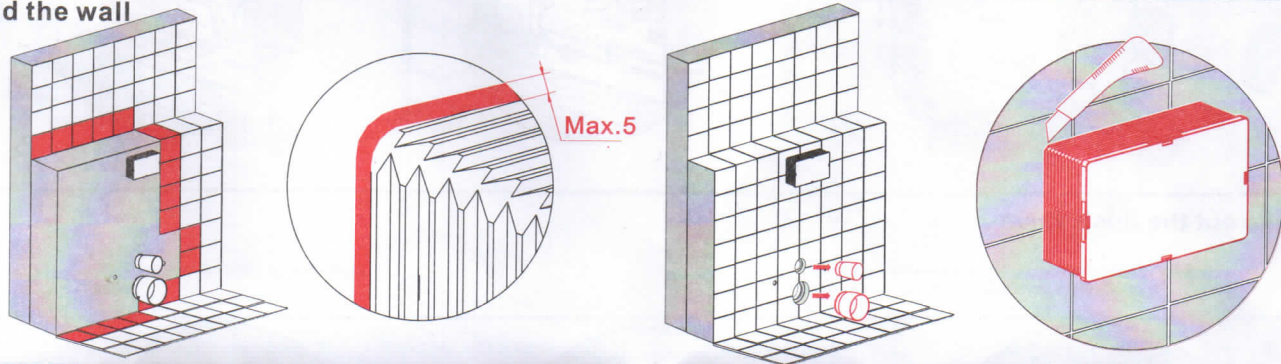

7. Install the panel






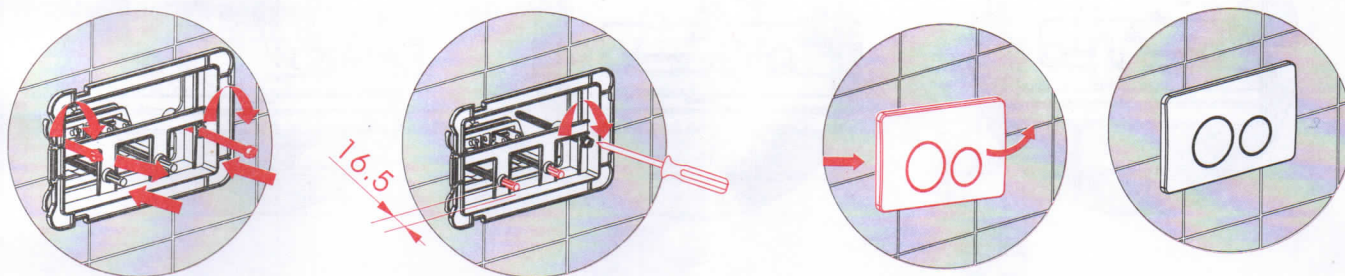


8. Install the wall hung toilet



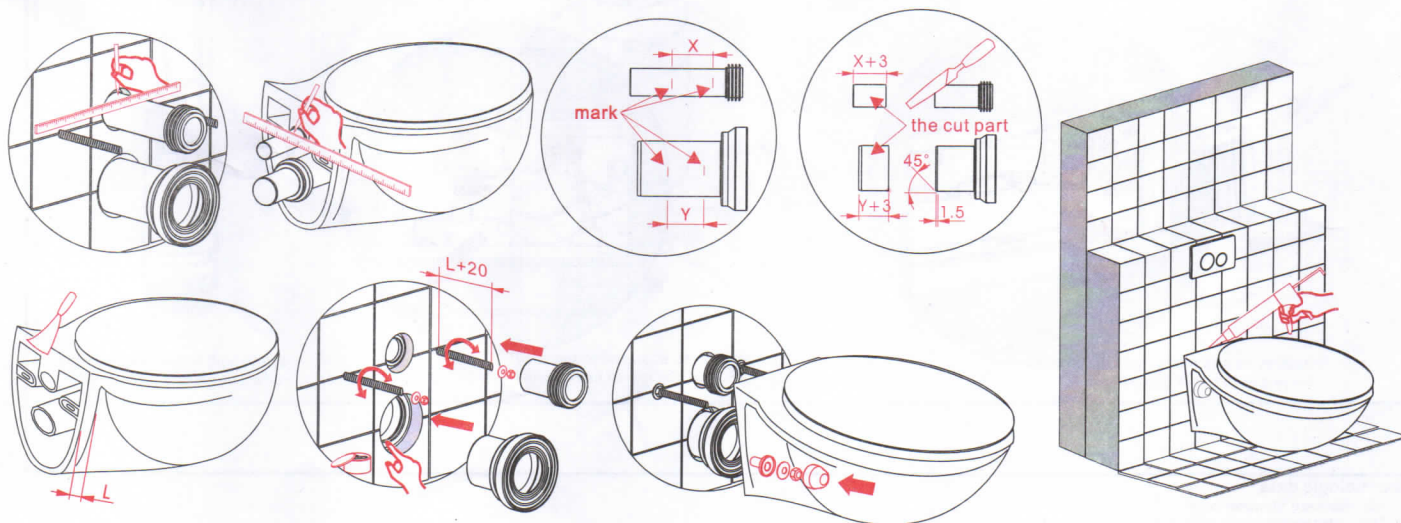


Maintenance Manual of Front Concealed Cistern (Install With Wall Hung Toilet)



1. Open the panel

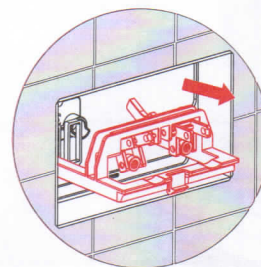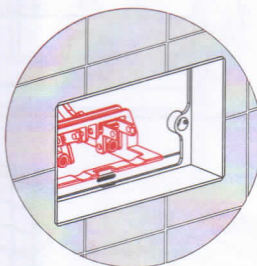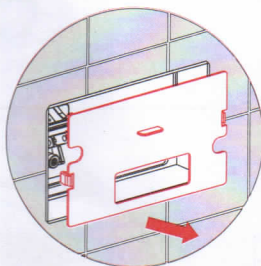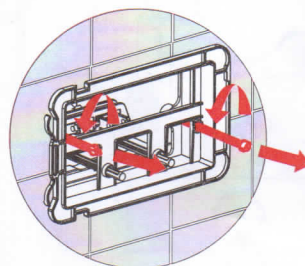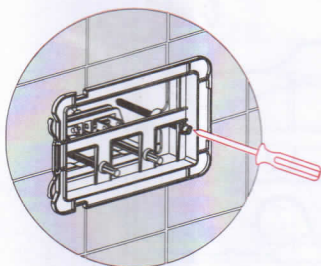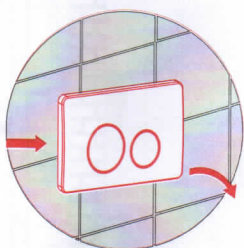

2. Take out the flush valve

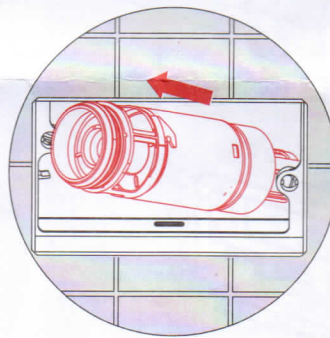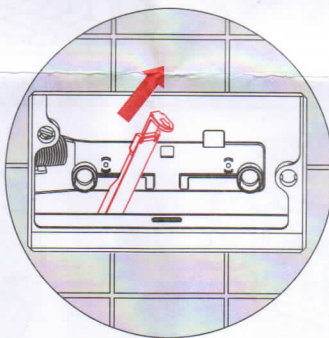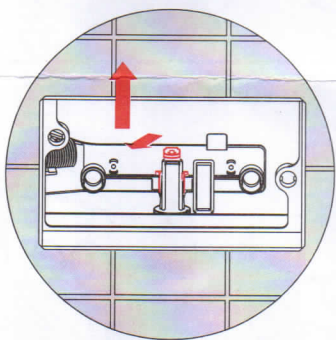

3. Take out the fill valve

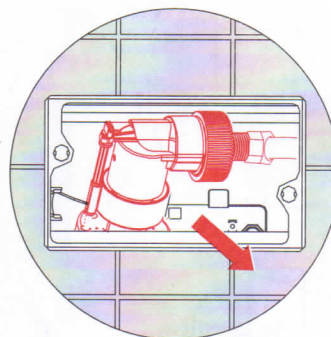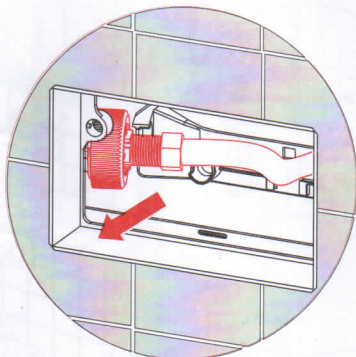


Technologic data:

- (1). 1/2" standard fill water hole.
- (2). The water stress range of fill water is 0.02~1.0Mpa.
- (3). The water temperature range is 2℃~45℃.
- (4). 3L/6L dual flush water volume, the flush water time is 3s~5s.
- (5). The painted steel frame is corrosion resistant and can bear 400kgs heavy stress.
- (6). The product can be installed in the wall of 90mm thickness.

1、Maintenance of fill valve


Malfunction and solve way of fill valve

malfunction	solve way
1.The water level too high or too low	Adjust water level
2.Can not stop water	Wash sealed rubber and mandril
3.Fill water speed slow	Wash filter;Adjust water stress to higher
4.Others questions	Pls consult with professional technician

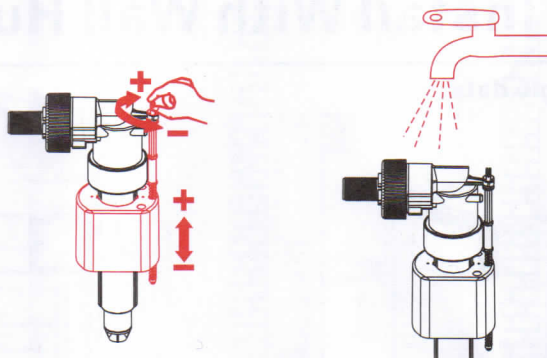


①Turn the knob,adjust water level height.

②Wash the dirt

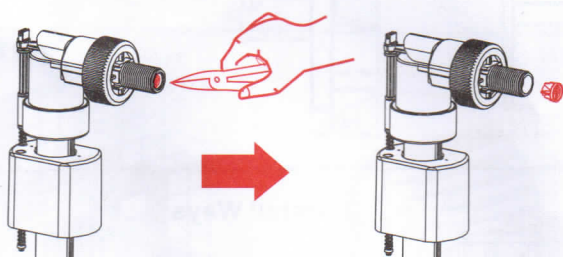

③Take off the filter tip and clean.


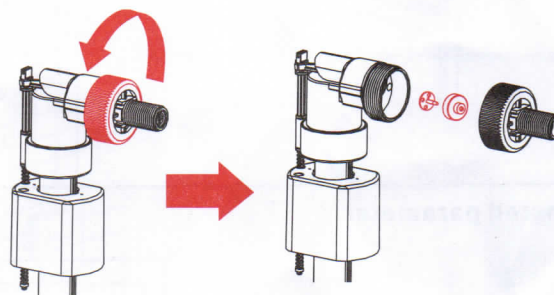


④Wring the screws widdershins and clean or place the valve core and the silica gel of fill valve.


2、Maintenance of flush valve

Malfunction and solve way of flush valve

malfunction	reason	solve way
1.Can not flush water	The flush pole distortion or break	Replace the flush pole
	The working water level too low	Adjust the working water level
2.Apear leak	The sealed rubber can not seal water	Replace the sealed rubber
	The movement of flush valve is blocked	Wash the dirt of flush valve

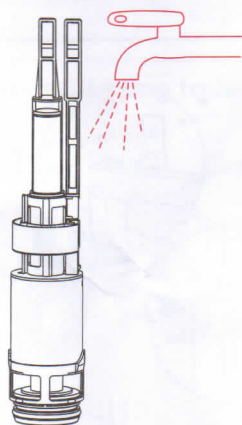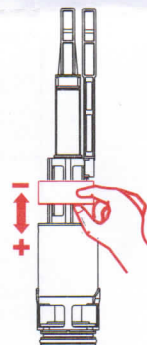

②Wash the dirt of flush valve by flowing and clean water.

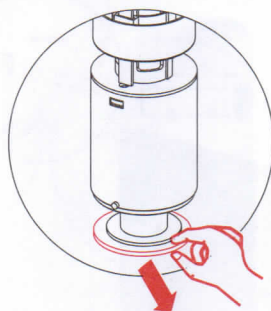

③Take out of the silica gel of flush valve, clean or replace it.



④Take out of the sealed rubber of flush valve, clean or replace it.

Attention: The process of installation is opposite to the process of teardown. Pls install the valve carefully according to original shape after clean or replace it.