

Personal Hygiene Appliance



Ins

SAMHONG TECH

SAMHONGTECH CO., LTD

2ND FLOOR EUNSUNG BUILDING 741,
YEONGDONG-DAERO, GANGNAM-GU,
SEOUL, KOREA

TEL: 82-2-3449-2341

FAX: 82-2-3449-2309

<http://www.samhongtech.co.kr>

USPA EUROPE S.R.L.

VIA MONTEVERDI, 8
28100 NOVARA-ITALY

TEL: +39-0321-030449

FAX: +39-0321-031648

<http://www.uspa.eu>
info@uspa.eu

**THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY.
READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.**

Notes

- 1. This product should be installed according to this manual.*
- 2. Please read this manual carefully and install this appliance properly.*
- 3. Please save this manual and place it in an easily accessible location.*
- 4. Do not attempt to repair this appliance by yourself. Doing so could void the warranty.*



This marking shown on the product or its literature, indicated that it should not be disposed with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal

Table of Contents

PREPARATION

| | |
|---------------------------------|---|
| 1. IMPORTANT SAFEGUARDS | 1 |
| 2. CAUTIONS BEFORE INSTALLATION | 2 |
| 3. IDENTIFICATION | 3 |
| 4. SAFETY INFORMATION (DANGER) | 4 |
| 5. SAFETY INFORMATION (WARNING) | 6 |

HOW TO USE

| | |
|-----------------|----|
| 6. HOW TO USE | 8 |
| 7. HOW TO CLEAN | 12 |
| 8. MAINTENANCE | 13 |

INSTALLATION

| | |
|-------------------|----|
| 9. HOW TO INSTALL | 14 |
|-------------------|----|

ETC

| | |
|--------------------------------|----|
| 10. BEFORE CALLING FOR SERVICE | 17 |
| 11. SPECIFICATIONS | 17 |
| 12. WARRANTY | 18 |

1 Important Safeguards

READ ALL INSTRUCTIONS BEFORE USING

DANGER - To reduce the risk of electric shock:

1. Do not place or store this appliance where it can fall or be pulled into a tub or sink
2. Do not place in, or drop into water or other liquid.
3. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING - To reduce the risk of burns, electric shock, fire or injury to people.

1. Close supervision is necessary when this appliance is used by or near children, elderly or invalid.
Children should not be permitted to use or touch this appliance without the supervision of an adult.
Be sure to adjust the temperature of the toilet seat for the elderly, those who are incapacitated, or people with sensitive skins.
2. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged or dropped into water.
4. Install this appliance properly according to this manual.
5. Only authorized people can install or repair this appliance. Do not attempt to repair this appliance by yourself, doing so could void the warranty.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any objects into any opening or hose.
8. Do not use outdoors. Do not use aerosol or oxygen spray products on the unit.
9. Always follow the grounding instruction in this manual before plugging in.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified people in order to avoid a hazard.
11. This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with this appliance.

SAVE THESE INSTRUCTIONS

2 Cautions before installation

NOTE THE FOLLOWING IMPORTANT POINTS

1. Do not install in a location where water might be splashed on this appliance or in a location exposed to such an excessive moisture that condensation forms on the product surface.
2. To avoid damage to electronic components due to high levels of humidity, provide adequate ventilation by opening a window and/or door when bathing. You may find operating an exhaust ventilating fan during these times of high humidity beneficial
3. The new hose-set supplied with the appliance should be used and the old hose-set should not be reused.
4. Use a water supply having a water pressure 0.05 MPa ~ 0.75 MPa.
5. Connect the product to a pipe carrying potable water. Do not connect to an industrial water line or other water supply that does not carry water of drinking quality.
6. In areas where water freezes during pipes in winter make arrangements to keep the pipes warm. The water remaining in the unit may sometimes freeze during storage in winter. In that case, warm the unit in the room before installation.
7. The thermal protector in the water tank may sometimes trip during storage or transportation in warm weather causing non-operation. In that case, cool the unit in the room before installation.
8. The rated power voltage is 220~240V / 50~60Hz.
9. Do not supply electrical power to the unit until the plumbing installation work has been completed; it could cause malfunction.
10. Unplug the appliance during maintenance and cleaning.

 


WARNING

Before installing this product, always observe the local laws and regulations regarding installation


In countries where power outlets are not permitted in bathrooms, such as U.K. or Ireland, please consult a qualified electrician for advice on connecting this unit to a power supply. The European two pin plug should be removed and the unit should be connected to the mains by a qualified electrician.

In such countries, every time the operating instruction manual refers to unplug the power cord, the user must instead switch off the circuit.

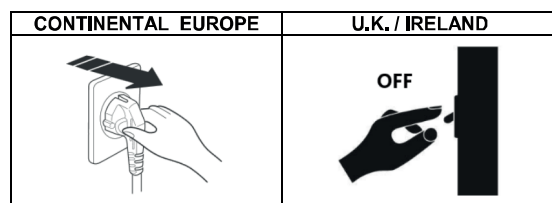


3 Identification

 1. Main unit

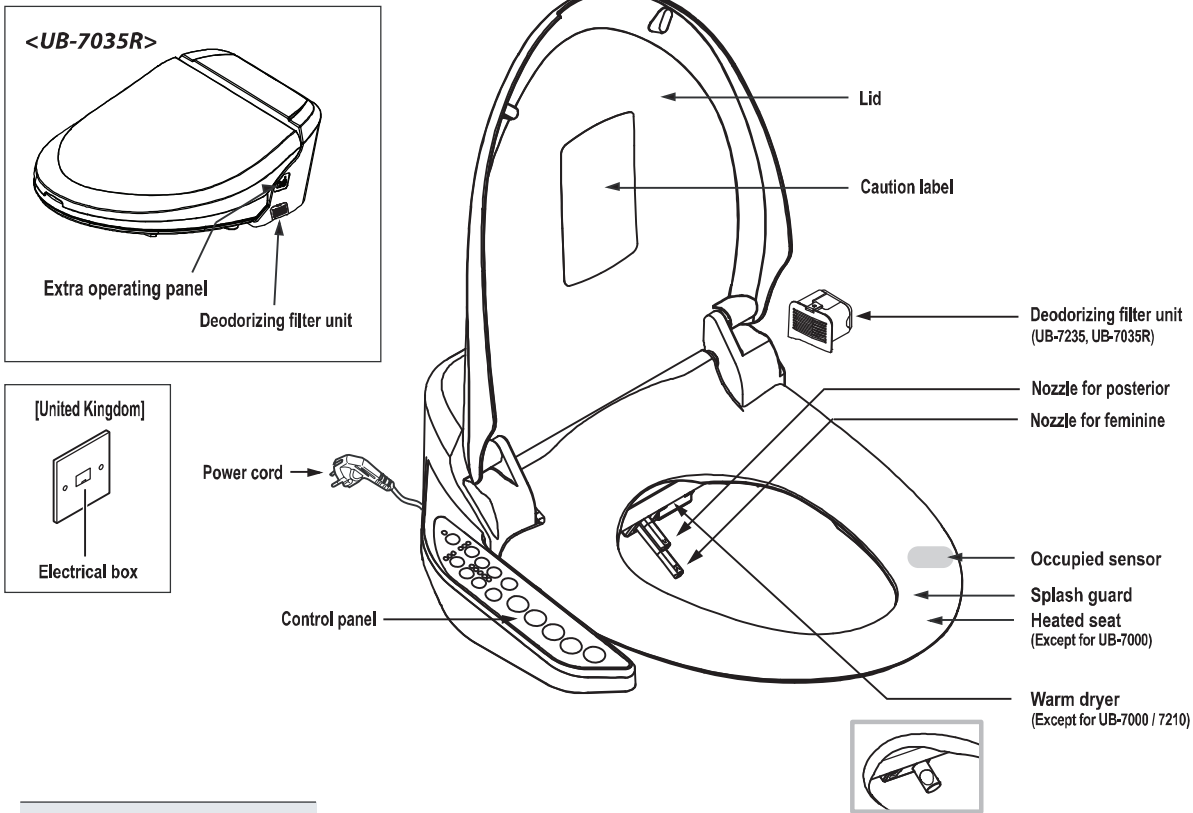

 2. Accessories

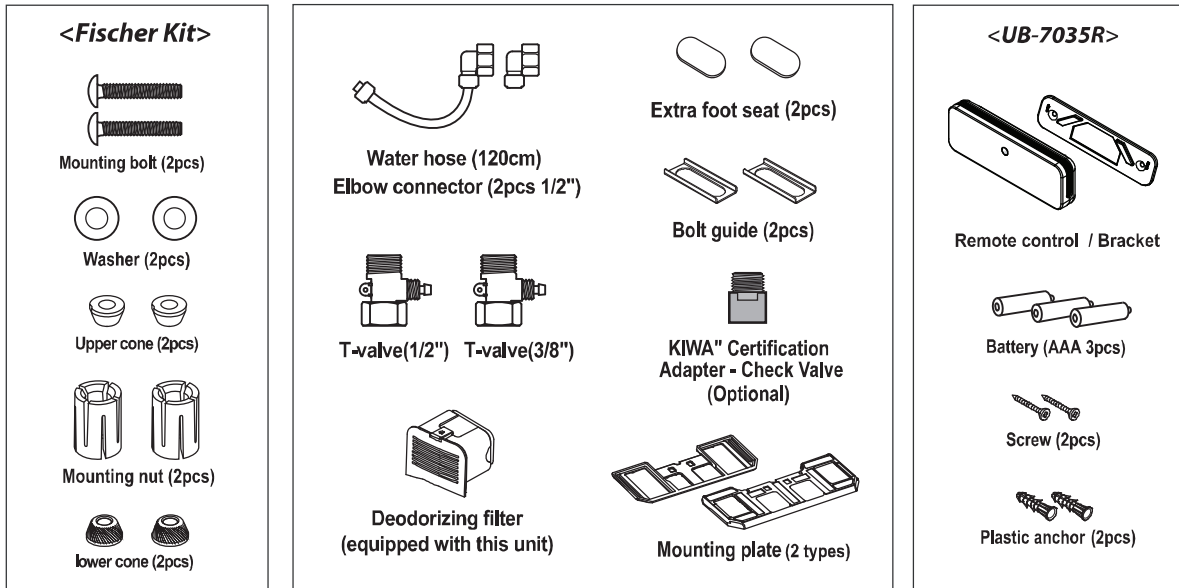

4 Safety Information (Danger)



DANGER

Please follow basic instructions to ensure the safe use of your appliance



Indicates a prohibited use of the appliance.



Indicates a required step in use of this appliance.



Prohibited



Do not handle with wet hands



Do not throw Any firearms



Do not disassemble



Do not wash



Ground connection



Required step



 
Meanings of symbols



PROHIBITED

Do not use a faulty or loose electric outlet or cord.

Doing so may result in a short circuit, electric shock or fire.

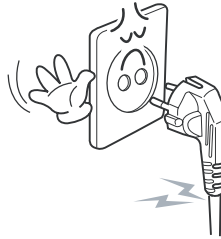

REQUIRED

Do not obstruct the warm air dryer outlet.

If the outlet is obstructed with any objects, it may result in fire

If the outlet is obstructed with hands, it may result in injury.



NO FIREARMS

Do not throw anything flammable into the toilet.

Doing so may result in fire



DO NOT WASH

Do not wash this appliance with water.

Doing so may result in fire or electric shock.



GROUND CONNECTION

Grounded wire or outlet must be installed

If avoided, it may result in short circuit or malfunction.

If no grounded plug is used, make sure to install grounded wire.





DANGER

 
Please follow basic instructions to ensure the safe use of your appliance



PROHIBITED

Do not use many appliances in a multiple adapter.


Doing so may result in fire or damage. Be sure to use a dry and clean outlet. Do not use a faulty or loose outlet.

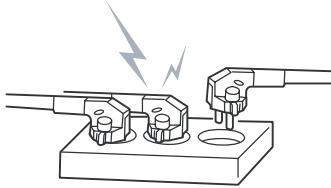

NO WET HANDS

Plug and unplug properly

 Do not plug or unplug with wet hands. It may result in injury or short circuit. Do not grab the cord when unplugging. Pull out the plug properly.

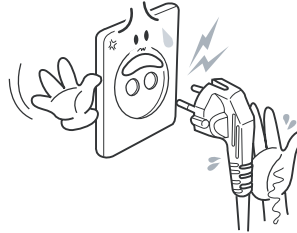

DO NOT DISASSEMBLE

Do not use when the seat and lid are disassembled

Doing so may result in electric shock due to high voltage inside.



REQUIRED

Unplug when beeping or smelling strangely.

Unplug right away. Contact your dealer where you bought this appliance.



DO NOT DISASSEMBLE

Do not disassemble, repair or modify this appliance.

 
Doing so may result in fire or electric shock.



PROHIBITED

Use tap potable water only. (ground water)

Not doing so may cause irritation or injury to your skin.

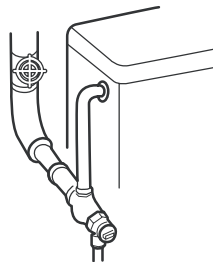

5 Safety Information (Warning)



Warning

Please follow basic instructions to ensure the safe use of your appliance.



PROHIBITED

Do not step on or place heavy objects on this appliance.

Doing so may damage the unit.
Do not step on a lid, seat or control panel to avoid injury or damage.



REQUIRED

Do not force the lid to close

Doing so may cause malfunction.



REQUIRED

Be aware of urine splash on a nozzle or warm air outlet.

Not doing so may result in smelling of products or failure.



PROHIBITED

Do not sit or lean against the lid or control panel

Doing so may cause malfunction or breakage.



 
REQUIRED

Unplug while not using over extended period of time.



REQUIRED

Unplug while there is thunder or lightening.

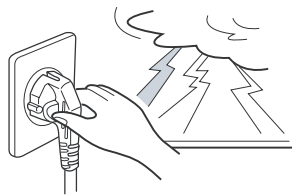



Warning

Please follow basic instructions to ensure the safe use of your appliance



PROHIBITED

Do not pull out water hose forcefully.

Doing so may cause the water leakage.



PROHIBITED

Use this appliance on a toilet only.

Not doing so may result in fire, injury or electric shock.



Improper use



PROHIBITED

Do not put a vase cup or small materials on this appliance.



REQUIRED

Be aware of a low-grade burn.

It may result in a low-grade burn if sitting on the heated seat for a long time.

Be aware if being used by the following:

- Children, elderly, patients, or who cannot control the grade of temperature.
- Sleeping pills users, or people who are on medication that causes drowsiness.
- Who are drunk or very tired and may fall asleep while sitting on the unit.

 
If injured in a low-grade burn, see a doctor immediately.



REQUIRED

Unplug when cleaning


Not doing so may result in fire or electric shock.

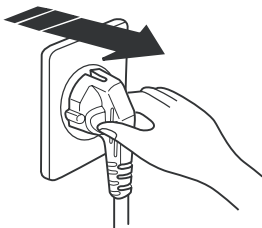

REQUIRED

Use the low temperature for children and disabled.

 If high temperature is set up, it may result in burn due to not recognizing the temperature.

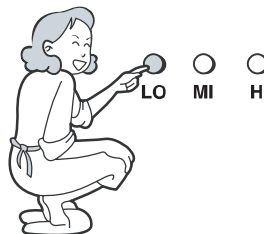

6 How to use UB-7235/7220/7215/7210/7000

※ Caution

All functions will be operational when the seat is occupied except Nozzle cleaning, Power/Economy.
Before operating, ensure that the water tank is filled up completely.

Stop

- Press "Stop" to stop current operation.
- When a user stands up, all operation will stop automatically.

Cleansing

- Press "Cleansing" to clean your posterior. The function will stop in 60 seconds automatically.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

Bidet

- Press "Bidet" for feminine wash. The function will stop in 60 seconds automatically.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

Dry (Warm air) (UB-7235 / 7220 / 7215)

- Press "Dry" button. The dryer nozzle comes out (level 3, position 3). This function will stop in 180 seconds automatically.
- Press this button again to switch between Soft and Turbo drying modes.

 
IIP (intensive impulse pulsation) (UB-7235 / 7220 / 7210)

- Intensive water pulsation (water pressure level 5) may help you for easier defecation. This function will stop in 60 seconds automatically.

Kids / Auto (UB-7235 / 7220 / 7210)

- Press "Kids/Auto" to change all functions to be suitable for children. The following settings will be selected:
 - Posterior nozzle in oscillating mode: 1 min (pressure level 1, position 5).
 - Drying: 3 mins.

Children should use this unit under adult supervision.

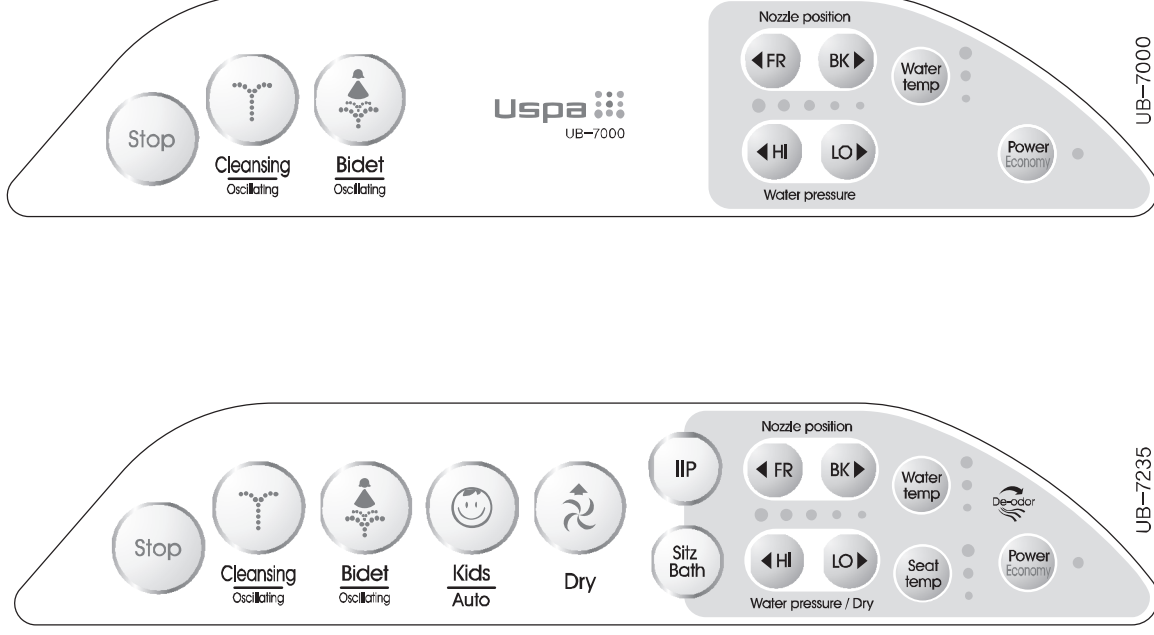

Sitz Bath (Healthy Wash) (UB-7235)

- Press this button to activate soft and warm water. Water pressure level 2, water temperature level 3.
- Feminine nozzle will operate 3 minutes.
- Press this button again during this function to stop washing and washing with oscillation.

Automatic deodorization (Deodor)

- When the appliance is in use, the deodorization function will operate (max 20 minutes).
- When a user stands up, it stops after 60 seconds.

Nozzle position

- Nozzle position can be adjustable by pressing the button.
- Position will be initialized (level 3) after power off.

Water pressure / Dry (UB-7235 / 7220 / 7215)

- Water spray pressure can be adjusted by pressing the button.
- Dryer temperature can be adjusted in 3 levels.
- Both levels will be initialized (level 3) after power off.

Temperature adjustment (Water temp / Seat temp) (UB-7235 / 7220 / 7210)

- Temperature of water and seat (except bidet) can be adjusted in 5 levels.
- There are four levels, Room temp-Low, Normal, High, and Hot.

Power / Economy

- Press the button to select Power on/Off.
- In the Economy mode, temperature of water and seat will be returned to the original setting after each use.
- Red light: Normal mode
- Green light: Economy mode
- Off: Power off

6 How to use UB-7035R

- ※ When the power is plugged in initially, nozzles for feminine wash and posterior will come out in turn.
- ※ All the operating times indicated are approximate.

Cleansing

- Press "Cleansing" to clean your posterior. The function will stop in 60 seconds automatically.
- Cleansing function can be activated in 3 modes:
Press the button 1st time: Normal cleansing.
2nd time: Cleansing with oscillation to widen cleansing area.
3rd time: Cleansing with oscillation and pulsation.
4th time: Normal cleansing again.

Bidet

- Press "Bidet" for feminine wash. The function will stop in 60 seconds automatically.
- Bidet function can be activated in 3 modes:
Press the button 1st time: Normal Washing.
2nd time: Washing with oscillation.
3rd time: Washing with oscillation and pulsation.
4th time: Normal washing again.

Kids

 
- Press "Kids/Auto" to change all functions to be suitable for children. The following settings will be selected.
 - Oscillation 1 min · Drying 3 mins
 - Water pressure level 1 · Nozzle position level 5
- Press this button again to activate different modes: Cleansing with oscillation, Cleansing with oscillation and pulsation, Normal cleansing.
- Children should use this unit under adult supervision.

Auto

- Press "Kids/Auto" button twice within one second to activate the automatic function. The following settings will be selected:
 - Normal cleansing (20sec), Cleansing with oscillation (20sec), Cleansing with oscillation and pulsation (20sec), Drying (3min), Stop functions will operate consecutively.


Dry (Warm air)

- Press "Dry" button. The dryer nozzle comes out and drying function will operate during 3 min.

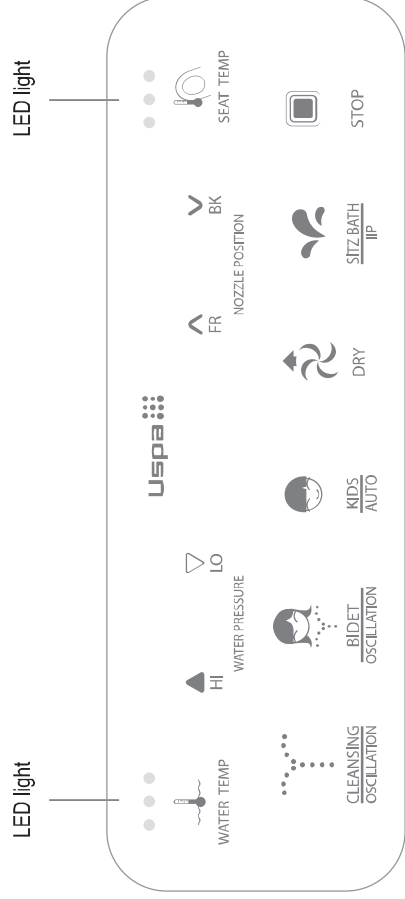

Side control buttons

 - Use side control buttons on the unit when the remote control is broken or the charge of batteries is low.
- While seated, press "Cleansing" on the right side or "Bidet" on the left side to start. Press again to stop. Do not use sharp items to press buttons.

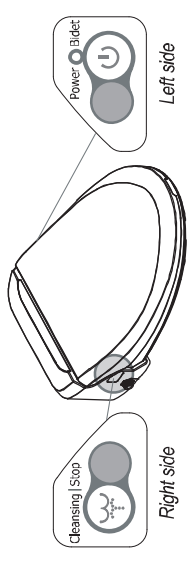

Power / Economy

- Press "Bidet" on the left side panel to select Power on/off or Economy mode.
- In the economy mode, temperature of the seat will be kept to 30 degrees.
- When the unit is occupied during the economy mode, the temperature of the water and seat will be returned to the original setting and go back to the economy mode after each use.
- Red light: Normal mode · Green light: Economy mode · Off: Power off

Self-diagnosis system

- This appliance has a self-diagnosis system. If the malfunctions occur, the power LED will blink.

SITZ BATH (Healthy)

- Press this button to activate temperature level 3, water pressure massaging.
- Feminine nozzle will operate
- Press this button again during normal washing and washing

IIP (Intensive impulse)

- Press "SITZ BATH/IIP" twice to have easy defecation. It will return to normal again to charge.
- Press "IIP" button again to charge (3 different modes available).

Water temperature adjustment

- Press the button to adjust water temperature: Low-Mid-High.
- LED lamp will indicate the level: Room temp: LED is off, Low-Mid: 1 LED is on, High: 2 LED is on

Water pressure

- Water spray pressure is adjustable by pressing the button from the top.
- During Drying function it will be initialized

Nozzle Position

- Nozzle position is adjustable when being used. Position will be initialized

Seat Temperature adjustment

- Press the button to adjust seat temperature: Low-Mid-High.
- LED lamp will indicate the level: Room temp: LED is off, Low-Mid: 1 LED is on, High: 2 LED is on

Automatic deodorization

7 How to clean

Nozzle cleaning Do not forcefully push or pull the nozzles, or bend them. It may result in failure. Make sure to use "Cleaning" button on the remote control.

Make sure the occupied sensor is not activated.
(not sitting on the seat or not place hands on the seat sensor part)

 
 
UB-7235 / 7220 / 7215 / 7210 / 7000

Press "FR" button, posterior nozzle comes out.
Press "BK" button, feminine nozzle comes out.
Press "Stop", "FR", "BK" and nozzles will return to their stand-by mode.

UB-7035R


Press "FR" button for 3 seconds, feminine nozzle comes out.
Press "FR", "BK" to shift alternatively the nozzles.
Press "Stop", nozzles will return to their stand-by mode.
Press "BK" button for 3 seconds, feminine and posterior nozzles come out alternatively for five times each, activating self nozzle cleaning program.

Do not forcefully push or pull the nozzles, or bend them.
Use a toothbrush or soft cloth to clean nozzles.
For extended period of time cleaning, unplug for safety.
Do not retract nozzles without a nozzle tip. It may result in malfunction.
Beware of losing or switching nozzle tips.

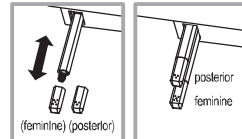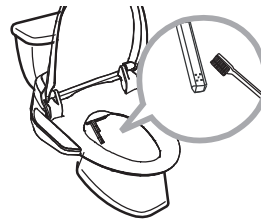

Strainer maintenance

 This appliance will not operate properly if the strainer is clogged.
Be sure to clean the strainer regularly.

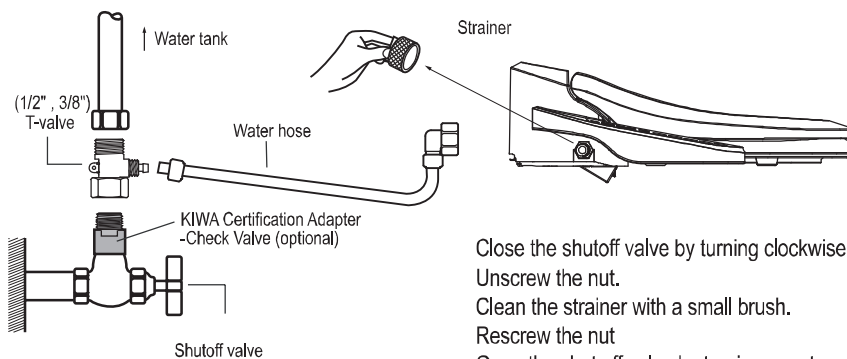

Close the shutoff valve by turning clockwise.
Unscrew the nut.
Clean the strainer with a small brush.
Rescrew the nut
Open the shut off valve by turning counter clockwise.

 
Cleaning the body

Regularly wipe off the body with a dry soft or sponge, or dampen with neutral detergent.

Release the lid


1. Pull left and up the left hinge part.
2. Release the right hinge part (Be aware your fingers not to be caught)

For care of plastic body, do not use any cleansers which are not safe to use on toilet seats.
(toilet cleanser, home cleanser, bleach, benzene, paint thinner, cresol etc)

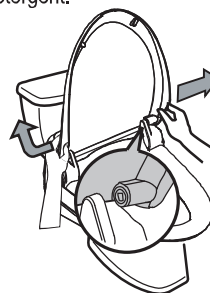

Draining water - while not using over extended period of time.

 
Unplug the power supply cord.
Not doing so may cause fire.

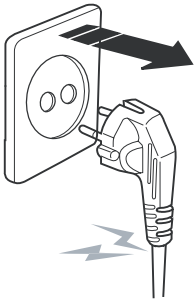


Detach the unit.
Refer to the installation method.



 Close the shutoff valve.

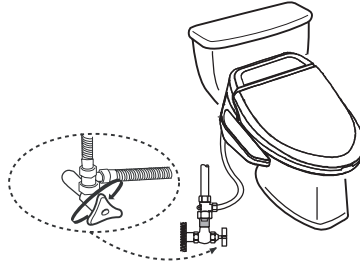

 
Uphold the appliance and thoroughly drain the water by unscrewing the drain bolt.
(beware of losing the drain bolt)

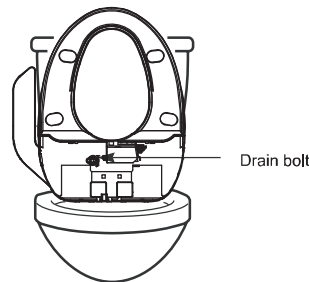

Screw the drain bolt and install the appliance.
Refer to the trial operation method in order to use this appliance again.

Preventing freezing

 Make sure the power cord is plugged in properly.

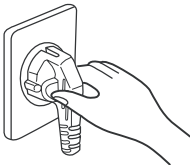

Set the temperature of water to low or middle.
(Freezing can be prevented by thermal efficiency of water tank)

If there is no heating system in the toilet, wrap pipes with cloth or other materials.

Not using the unit for a long time in winter unplug and drain the water from the water tank and pipes thoroughly.

Refer to the water drain method.

9 How to install



Do not plug in until installation is finished completely. Not doing so may damage the appliance.

If electric work is needed, contact a qualified electrician or serviceman only.

Remove the existing toilet lid and seat

 
1. Remove the nuts, washers and cone packings from the toilet seat mounting bolts in the back of the toilet.
2. Remove the toilet seat, lid and mounting bolts.
3. Keep them in case of installing again.

Install the appliance

Installation


How to mount the plate

Place the plate and guides over each mounting hole. Insert the mounting bolts respecting the sequence shown in the picture.

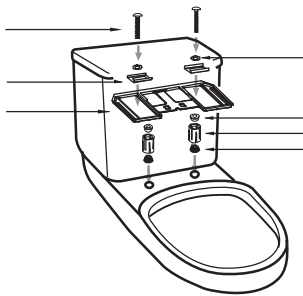

Mounting plate Bolt guide Mounting bolt Washer
Upper cone Mounting nut Lower cone

 How to attach and detach the unit

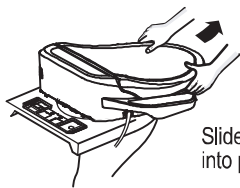


Slide the unit until it clicks into plate.



Lift the unit up and forward.

Toilet size

 The toilet dimensions must be within those shown below. Do not install this appliance on a toilet that does not meet those dimensional requirements.

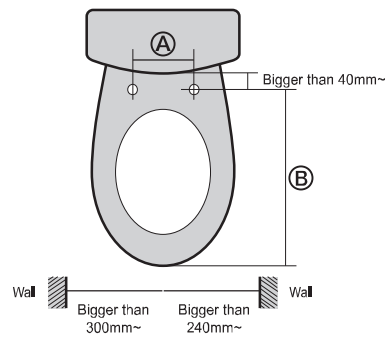


(UNIT: mm)


| MODEL | A | B |
|----------|-----------|-----------|
| Comfort | 140 ~ 240 | 430 ~ 480 |
| Standard | 140 ~ 240 | 400 ~ 450 |
| Design | 140 ~ 240 | 410 ~ 460 |

Occupied sensor

 This appliance is equipped with occupied sensor. Unit will not work unless seat is occupied.

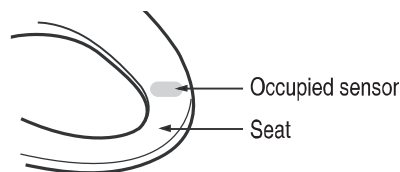

 Connecting the water hose and grounding wire

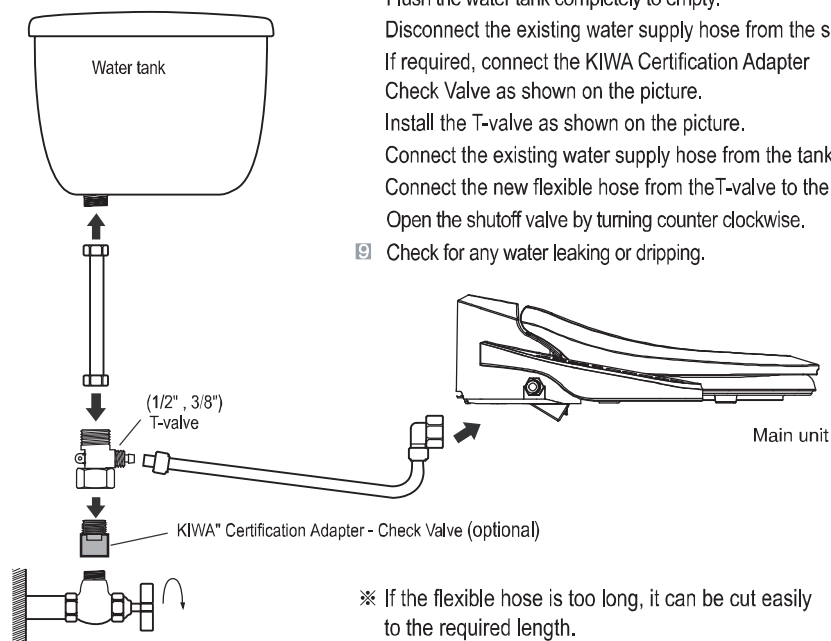

Close the shutoff valve by turning clockwise.
Flush the water tank completely to empty.
Disconnect the existing water supply hose from the shutoff valve.
If required, connect the KIWA Certification Adapter Check Valve as shown on the picture.
Install the T-valve as shown on the picture.
Connect the existing water supply hose from the tank to the T-valve.
Connect the new flexible hose from the T-valve to the main appliance.
Open the shutoff valve by turning counter clockwise.

☑ Check for any water leaking or dripping.

Trial operation

1. Preparation

Plug the power cord into the outlet. Press "BIDET" or "CLEANSING", then water tank will be filled within 30 seconds after the water tank has filled up, you will hear a long buzzer sound.

2. Checking all functions

 
Cover the toilet bowl using the plastic wrapping sheet of the unit to prevent water from being sprayed out of the toilet.

Then check for all the functions described in this manual.

3. During trial operation there are possibilities of remaining water coming out from the unit while heating.

Remote control unit

How to insert batteries

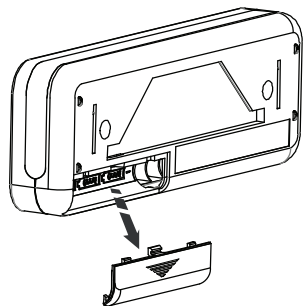


1. Open the battery lid of the remote control and insert 3 AAA batteries into the battery compartment.
2. Check if the remote control works properly while the seat is being occupied.

- Use 3 AAA batteries only. Do not use rechargeable batteries.
- Do not use old and new batteries together. Use same type of batteries only.
- Make sure that all batteries are inserted correctly.
- Remove the batteries if the remote control is not used for a long time.

How to attach the remote control bracket to the wall

 - Use screws with the plastic anchors or attach the bracket with the sticker.

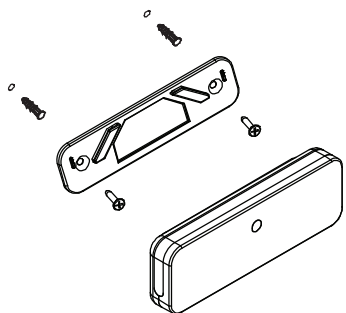

10 Before calling for service

| Problem | Possible cause | Solution |
|---------------------------------------|---|--|
| Completely fail to work | Is there a power cord outage? Is the power cord unplugged? Are you sitting on the seat correctly? | Check for a power cord failure or a tripped breaker Plug the power cord in properly Sit on the seat completely |
| Water does not spray | Is the water shutoff valve closed? Is the strainer clogged? Are the nozzles clogged? | Open the shutoff valve Clean the strainer Clean the nozzles |
| Water is leaking or dripping | Check if all hoses are tightened properly | If water is still leaking or dripping, contact your dealer |
| Seat, water or air is not enough warm | Is the temperature set to OFF? Is appliance used in economy mode during a cold weather? | Set the temperature following the instructions in this manual Release the economy function |

11 Specifications

| Item | UB-7035R | UB-7235 | UB-7220 | UB-7215 | UB-7210 | UB-7000 |
|-----------------------|-------------------------------|---|------------------------|---------|---------|-------------------------------|
| Standard power supply | 220~240V / 50~60Hz 1660~1975W | | | | | 220~240V / 50~60Hz 1605~1910W |
| Water supply | Way of connection | Direct connection to tap water | | | | |
| | Water pressure | 0.05MPa~0.75MPa | | | | |
| Clean-sing | Spray for cleansing | 650 ± (100)mL /min | | | | |
| | Spray for bidet | 650 ± (100)mL /min | | | | |
| | Water capacity | 200 mL | | | | |
| | Spray temperature | Room Temp~40°C(104°F) | | | | |
| | Heat capacity | 220~240V / 1600W~1900W | | | | |
| | Safety feature | Thermal switch, Temperature fuse, Floating switch | | | | |
| Dry | Air temperature | Room Temp~60°C(140°F) | | | None | |
| | Heater capacity | 220~240V / 280~333W | | | None | |
| | Safety feature | Temperature fuse | | | None | |
| Heated seat | Seat temperature | Room Temp~40°C(104°F) | | | | None |
| | Heater capacity | 220~240V / 55~65W | | | | None |
| | Safety feature | Temperature fuse | | | | None |
| Deodorization method | Catalytic filter | None | | | | |
| Circuit breaker | Within 15mA 0.03 second | | | | | |
| Length of power cord | 1.5m | | | | | |
| Dimensions | Comfort | (W)392X(L)520X(H)157mm | (W)466X(L)520X(H)157mm | | | |
| | Standard | (W)392X(L)490X(H)157mm | (W)466X(L)490X(H)157mm | | | |
| | Design | (W)392X(L)504X(H)157mm | (W)466X(L)504X(H)157mm | | | |
| Weight | 4.2Kg | 4.4Kg | | | 4.2Kg | |

WARRANTY

USPA Personal Hygiene Appliance Limited Warranty

We warrant our products to be free from manufacturing defects under normal use and service for a period of two(2) years from date of your purchase. Only the ORIGINAL PURCHASER may make a claim under this limited warranty.

Our obligation to you under this warranty is limited to repair or replacement, at our option, of defective products or parts, provided that the products were properly installed and used in accordance with instructions. We reserve the right to make inspections in order to determine the cause of the defect. We will not charge for labor or parts in connection with warranty repairs or replacement. We are not responsible for the cost of removal, return and/or reinstallation of products.

This limited warranty does not apply to:

- a) Damage or loss from fire, earthquake, flood, storm, etc
- b) Damage or loss resulting from any unreasonable use, abuse, negligence or improper maintenance.
- c) Damage or loss from improper installation, removal, repair, or modification.
- d) Damage or loss resulting from sediment or other matters contained in your water system.

This warranty gives you specific legal rights.

For warranty or service information, please contact your dealer where you bought this appliance or please contact us.

Only the original purchaser may submit a claim under this limited warranty. To activate your warranty, complete this form.

This limited warranty is our only warranty covering your product. Repair or replacement as provided under this warranty shall be the exclusive remedy available to you. We shall not be responsible for loss of the product or for other incidental, or consequential damage or expenses you may incur or for labor or other costs due to installation or removal or cost or repairs by others, or for any other expense not specifically stated above. Except to the extent prohibited by appliance law, any implied warranties, including that of merchantability or fitness for use are expressly limited to the duration of this warranty.

※ Warning! We are not responsible or liable for any failure of or damage to this plumbing product component caused by in-tank bowl cleaners containing chlorine (calcium hypochlorite)

※ Note : The use of high concentration of chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.

For more information, please contact your dealer or us.

Purchase Date _____ Purchase from _____
Invoice # _____ Amount Paid _____ Serial # _____
Address _____ City _____ Country _____ Zip _____
Phone _____ Fax _____ E-mail _____

Mail, email or fax the warranty form to:

USPA EUROPE S.R.L.

VIA MONTEVERDI, 8 - 28100 NOVARA - ITALY
TEL : +39 0321 030449 FAX : +39 0321 031648
<http://www.uspa.eu>
info@uspa.eu

Great products for your healthy living!

MEMO