





Quick guide






Cleaning agents and cleaning equipment

Aggressive and scouring cleaning agents can damage the surface.
Only use mild, liquid cleaning agents that are kind to the skin.
The Geberit AquaClean cleaning set (art. no. 242.547.00.1) includes a ready-made cleaning agent that is optimal for cleaning all Geberit AquaClean surfaces.




 **CAUTION**
Damage to the device from aggressive descaling agents
• Only use Geberit AquaClean descaling agent in the device

 **Consumables:**
Geberit AquaClean cleaning set (art. no. 242.547.00.1)
Geberit AquaClean descaling agent (art. no. 147.040.00.1)

Permissible cleaning agents


-  Only use skin-friendly cleaning agents
-  Cleaning agents are permitted to have a low acid content, e.g. heavily diluted citric acid
-  The use of mildly foaming cleaning agents is permitted
-  Only use liquid cleaning agents
-  Water-diluted cleaning agents are preferred

Permissible cleaning equipment

-  Use soft, fine pored sponges
-  Use lintfree, soft towels which are free of dust
-  Use a toilet brush

Getting to know your device


The device at a glance

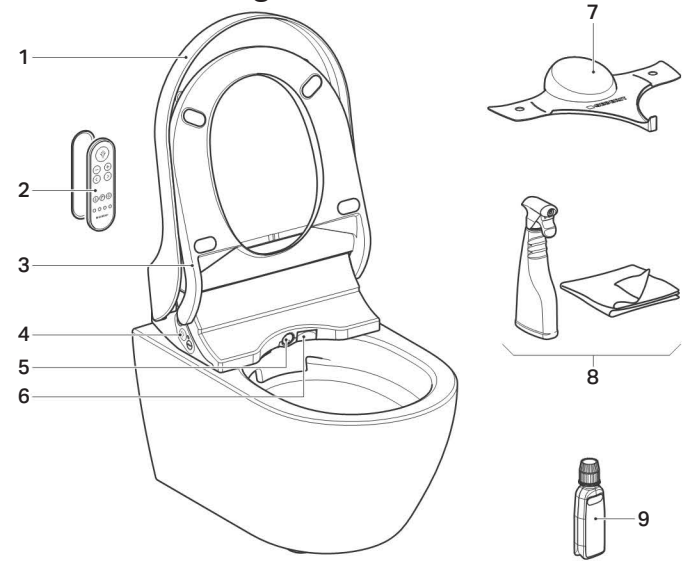

- 1 WC lid
- 2 Remote control with magnetic wall-mounted holder
- 3 WC seat with user recognition and WC seat heating
- 4 Lateral control panel with status LEDs
- 5 Spray arm with spray nozzle and Lady shower nozzle
- 6 Dryer flap
- 7 Spray shield
- 8 Geberit AquaClean cleaning set (art. no. 242.547.00.1)
- 9 Geberit AquaClean descaling agent (art. no. 147.040.00.1)

Front side of the remote control

All shower toilet functions can be operated with the remote control.

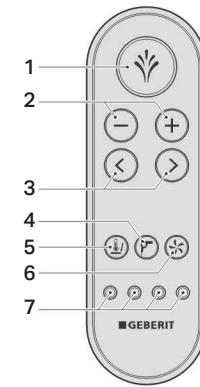


- 1 <Shower> button: start and stop the spray functionality/stop dryer functionality
- 2 <->/<+> buttons: decrease or increase the spray intensity
- 3 <left>/<right> arrow keys: set the spray arm position
- 4 <Dryer> button: start and stop the dryer
- 5 <WC seat heating> button: switch WC seat heating on/off
- 6 <Odour extraction> button: start and stop odour extraction
- 7 <User profile> buttons: activate the user profiles 1–4

i User profiles allow you to access your personal settings directly. Select your user profile directly before or as soon as you sit down.

Lateral control panel

The shower toilet functions of the device can be operated from the lateral control panel.

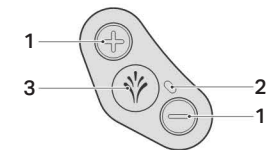


- 1 <+>/<-> buttons: increase or decrease the spray intensity
- 2 Status LEDs
- 3 <Shower> button: start or stop the anal shower or the Lady shower

How to use the device

Use the anal shower


- ▶ Briefly press the <Shower> button on the lateral control panel or on the remote control once.

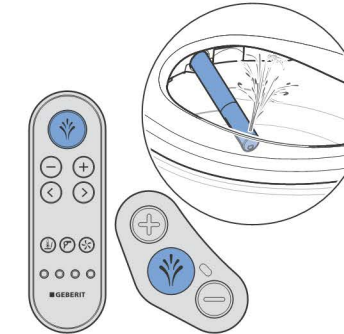

i You can stop the shower procedure early by pressing the <Shower> button once again.

Use the Lady shower


- ▶ Press the <Shower> button on the lateral control panel or on the remote control for 2 seconds.

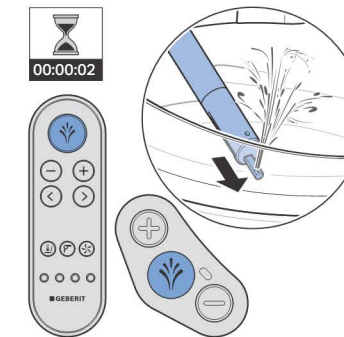

i You can stop the shower procedure early by pressing the <Shower> button once again.

Set the spray intensity


- ▶ Press the <+> button to increase the spray intensity. Press the <-> button to decrease the spray intensity.

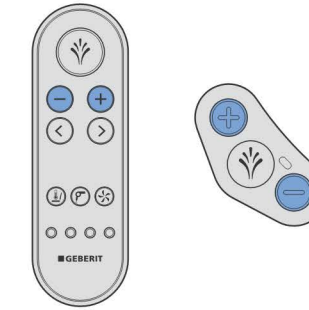

i You can set the spray intensity in 5 stages.


Set the spray arm position

- ▶ Press the arrow keys on the remote control to position the spray arm.

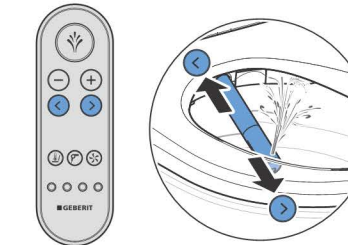

Deactivate the oscillating motion of the anal shower

- ▶ Briefly press the <left> and <right> arrow keys on the remote control at the same time.

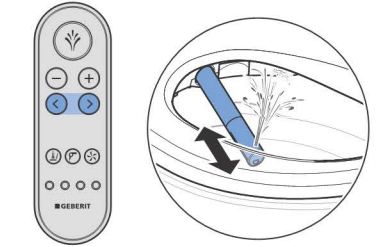

i By pressing the buttons again for 2 seconds, you can reactivate the function.

Use the dryer

- ▶ Stop the shower procedure.

i The dryer functionality can be started during a shower procedure using the <Dryer> button. The drying procedure interrupts the spray functionality.

