

# GROHE SENSIA PRO MAINTENANCE GUIDE

## ADDITIONAL INFORMATION

The Sensia Pro must be decalcified on a regular basis.  
For more detailed information see the User Manual.

For all troubleshooting, more detailed descriptions, all cleaning steps,  
or how to remove the lid for cleaning purposes, scan the QR code.




 

Scan to download a detailed user guide

**Sensia PRO**  
DESIGN + ENGINEERING  
GROHE GERMANY

97.0101.031/ÄM 256593/08.23

<http://www.grohe.com>

**GROHE**

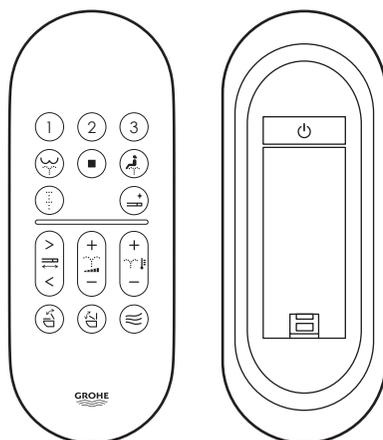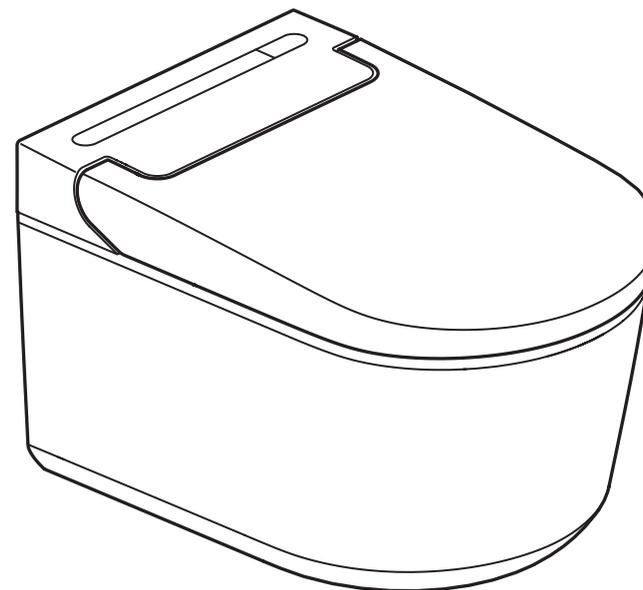

# MAINTENANCE GUIDE

## SENSIA PRO

This Maintenance Guide does not replace the User Manual.  
Please read the User Manual and observe the warnings and safety instructions.



Scan for more language options

# GROHE SENSIA PRO MAINTENANCE GUIDE

## GENERAL INFORMATION



To fully utilize the effect of AQUA CERAMIC **do not** use the following cleaners and tools:

 
- Strong alkali/acidic cleansers
- Abrasive cleansers
- Water-shedding or antifouling cleansers, or surface coating agents
- Cleaning tools that damage the material surface, such as metallic or abrasive brushes



For detailed cleaning instructions and recommended cleaning tools please scan the QR code on the last page of this guide.

## FIRST STEP


### SET THE OPEN/CLOSE TO OFF.



Press "Stop" and "Toilet Lid Open / Close" button simultaneously for 2 seconds.

### SET THE AUTO FLUSH FUNCTION TO OFF.\*

 \* Only if auto flush kit is installed.



Press "Front Washing" and "Spray Strength Adjust" "+" button simultaneously for 2 seconds.

### SET THE AUTO PREFLUSH FUNCTION TO OFF.\*

\* Only if auto flush kit is installed.




Press "Front Washing" and "Water Temperature Adjust" "-" button simultaneously for 2 seconds.

## CLEANING



### TOILET SEAT / LID / COVER / REMOTE CONTROL

Using a soft, damp cloth, wipe the surface of the toilet seat, lid, cover and remote control. Note: Be sure to use a neutral cleaning product.

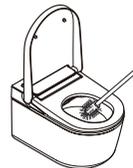

### BOWL

Clean the bowl with (warm) water using a soft brush or a sponge soaked in a neutral cleaning product. The lid can also be removed for cleaning purposes (please scan QR code)

## CLEANING THE NOZZLES

### AUTOMATICALLY

To clean the nozzle while using the toilet (sitting on the seat) follow the procedure below using the remote control.



Press "Nozzle Clean" button.

### MANUALLY

The nozzles can be extended for manual cleaning with a soft cloth while not using the toilet (not sitting on the seat). Please follow the procedure below using the remote control.




1. Press "Nozzle Clean" button.
2. Press "Nozzle Clean" button again, the current nozzle retracts, and the other nozzle extends without spraying water.
3. Press "Nozzle Clean" button again, the nozzle retracts

## CLEANING / REPLACING THE NOZZLE TIPS

The nozzle tips can be removed for optimal cleaning and replacement.

**Note:** To extend and retract the nozzle, see "Cleaning the nozzles manually".

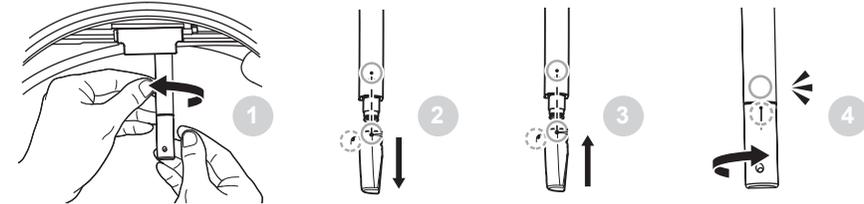

When the nozzle is extended, turn the nozzle tip to the left and pull it off.

To put the nozzle tip back, place it as shown in the picture onto the nozzle and turn it to the right.

\* Above is Rear Wash nozzle tip changing instruction, to replace Front Wash nozzle tip, please use reverse turning way.


## FINAL STEP

 Follow first step to set auto flush/preflush function\* to ON.

\* Only if auto flush kit is installed.

## DESCALING

1. Need to descale when GROHE LOGO blinking.
2. It blinks after 3 months of use (period can be changed).
3. Please purchase "Descaling Kit" :1015469990.
4. For details such as specific methods, please refer to the User Manual online or the manual included in the Descaling Kit.



Press the "Rear wash" and "Nozzle clean" button simultaneously for 2 seconds.