

CCP Pan and cistern assembly and Installation guide

Fig 1

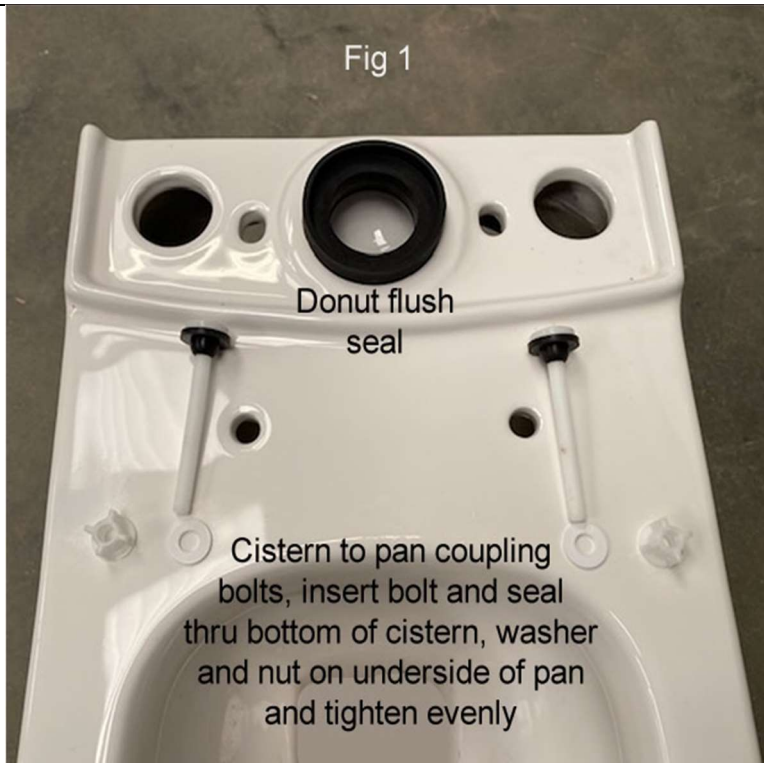


Fig 2

Connect pan to soil, pull flexi water hose thru aperture. Ensure pan is butted tightly to back wall. Silicone sealant around entire base of pan and on both vertical sides of pan to wall, leave 24 hours to cure

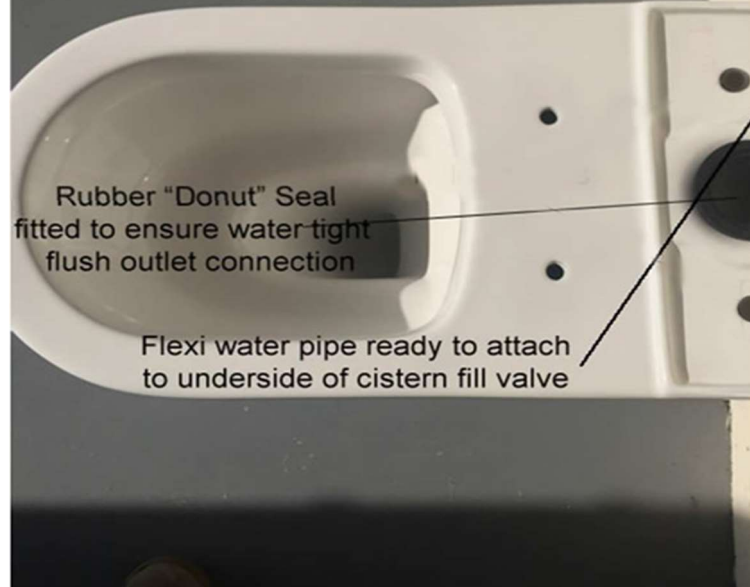


Fig 3

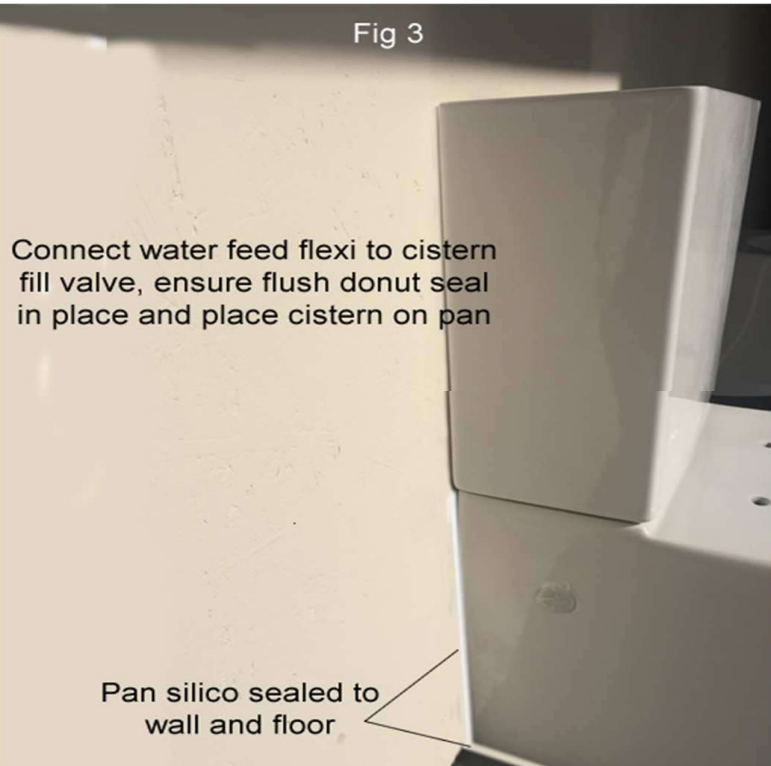


Fig 4

