ΤΟΤΟ

Head Office

TOTO Europe GmbH Zollhof 2, 40221 Düsseldorf Germany Tel:+49 (0)700 8686 0700 тото

NEOREST

Instruction Manual	with Warranty	Information
--------------------	---------------	-------------

> See Page 64.

	 		1
-			



You are advised to record the following information to allow quick service.

Date of purchase :	Name of shop :
Date : year month day	
	Tel :

2017.8.10 D07209 Printed in China.

- Thank you for your recent purchase of the TOTO NEOREST. Please read the enclosed information to ensure the safe use of your product.
- Be sure to read this Instruction Manual before using your product and keep it in a safe place for future reference.

The available functions vary according to the model.

Che and this	ck your model name write a check mark in field as needed.	Model name Part No.	Part number Top unit TCF	Bowl	unit
		Model	NEOF	REST	
	4	Part No. Your Model	TCF996	TCF994	Ref
Funct	tions				Page
		Rear cleansing			
	Cleansing	Rear soft cleansing			
		Front cleansing			
		Wand position adjustment			16
Basic		Water pressure adjustment	•		
Functions	Changing the washing method	Oscillating cleansing			
		Pulsating cleansing			
		Personal setting lock			
	Drying	Warm air drying	•	٠	16
	Changing the temperature	Temperature adjustment	•	٠	24, 2
		Auto wand cleaning	-		20, 21
Sanitary	[ewater+] sanitizing	Auto bowl cleaning	•	•	
Functions	Maintaining the bowl unit cleanliness	Photocatalyst cleaning	٠	-	
	Removing odors	Deodorizer	•	•	
	Plantin	Remote control bowl unit cleaning		•	17
	Flushing	Auto bowl unit cleaning	•	٠	
	Opening and closing	Opening and closing the toilet seat with remote control			22, 2
Convenient		Auto open / close (lid)	•	•	22.2
Functions	Lighting up	Soft light			22,2
	Heating the toilet seat	Heated seat	٠	٠	-
		Timer energy saver	•	٠	
	Saving energy	Auto energy saver	• •		26, 27
		Wand cleaning	•	•	33
	Maintenance	Descaling mode	•		34

<section-header>

Photocatalyst coat*


As you approach and sit	As you stand up	As you move away
 A mist is sprayed in the bowl unit to make it more difficult for dirt to adhere. When you sit on the toilet seat, the deodorizer operates. 	The wand is cleaned with [ewater+]. (The wand extends and then retracts.)	 [ewater+] is sprayed in the bowl unit to maintain cleanliness. The UV lamp lights up for about 1 hour. *

Table of Contents

Safety Precautions

These precautions are important for safe usage. Be sure to follow them and use the product correctly.

Symbols and Meanings



Symbol	Meaning
\bigcirc	This symbol indicates a prohibited use of the product.
	This symbol is used to indicate a required step in the use of this product.

This product is classified as Class 1 Equipment and must be grounded via an ground connection.
Install this equipment close to a electrical outlet.

• This equipment is not to be used by any person who has reduced physical, sensory or mental abilities (including children), nor is it to be used by any person who lacks sufficient experience or knowledge. However, such persons may use the equipment when a person who takes responsibility for their safety provides supervision and direction.

Children must be supervised to make certain that they do not play with the equipment.

• Use the new hose set included with this equipment. Do not reuse an old hose set.

Do not touch the power plug or connection of electrical box with wet hands. • Doing so may cause electrical shock.

Do not get any water or cleaning solution on the top unit or power plug or electrical box.

- Doing so may cause fire, electrical shock, heat or short circuit.
- Doing so may cause the product to crack resulting in injury or water damage.

Never disassemble, repair or alter.

Do not use tools in places other than designated.

• Doing so may cause fire, electrical shock, overheating, short circuit or breakdown.

Do not install the product on moving vehicles such as wheeled vehicles or boats. • Doing so may cause fire, electric shock, short circuit or malfunction.

• The toilet seat, toilet lid, top unit or other parts may come loose and fall off, resulting in injury.

Do not use the NEOREST if a malfunction occurs.

• In case of breakdown or other problem, be sure to cut off power by means such as unplugging the power plug or switching the breaker in the distribution board to OFF.

- Close the water shutoff valve to stop water supply.
- Possible malfunctions:
- -Water is leaking from a pipe or the top unit.
- The product is cracked or broken.
- The product makes a strange noise or emits a strange odor.
- -The product emits smoke.
- -The product is abnormally hot.
- -The bowl unit is clogged.
- -The toilet seat cushion is out of place.

• Continued use after malfunction could cause a fire, electric shock, heat, short circuit, injury or water damage.

Only use tap water or potable well water (underground water). Do not use seawater.

• Doing so may cause irritation to the skin and malfunction.

Do not touch the power plug or electrical box during thunderstorms. • Doing so may cause electrical shock.

Do not allow the water supply hose to touch the power plug or outlet or electrical box.

• Doing so may cause condensation resulting in a fire, electrical shock, heat or a short.

Do not do anything that may damage the power cord, power plug.

Do not strike, yank, twist, excessively bend, damage, alter, or heat the electrical cords. Also, do not place anything heavy on, bind or pinch the electrical cords.

• Using a damaged electrical cord may result in a fire, electrical shock, heat or short.

Do not use a loose or faulty electrical outlet. (Europe and Russia) • Doing so may cause fire or short circuit.

Do no use any outlet or wiring equipment beyond its specified rating. (Europe and Russia)

• Plugging too many plugs into the same outlet, for example using outlet splitters, can cause fire due to heat.

Do not use any power supply other than the one specified. AC 220V - 240V, 50Hz

• Doing so may cause fire or excessive heat.

Safety Precautions (Continued)

To reduce the danger of burns, death from electric shock, fire or other human injury:

-Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped in water. Return the product to TOTO Europe GmbH for examination and repair.

-Never block the air openings of the product or place it on a soft surface, such as a bed or a couch, where the air openings could be blocked. Keep the air openings free of lint, hair or a similar material.

-Never use it while sleepy or drowsy.

-Never drop or insert anything into any opening or hose.

-Do not use it outdoors where aerosol (spray) products are being used or where oxygen is being administered.

Do not stick a finger or anything else into the warm air outlet.

Do not place anything on the warm air outlet or drape clothes over it. • Doing so may cause burns, electrical shock or malfunction.

Keep cigarettes and other open flames away from the product. • Failure to do so may cause fire.

Refrain from sitting on the seat for long periods.

• Improper use of the toilet seat may cause irritation or burn.

When sitting for a long time on the toilet seat, switch the toilet seat temperature adjustment to "OFF". When any of the following persons use a heated seat or warm air drying, someone should switch the toilet seat temperature adjustment to "OFF" and switch the drying air temperature to "Low".

-Young children, the aged and other users unable to set the temperature appropriately themselves

- The ill, physically disabled and others who do not have freedom of movement.

- Those using any medicines that cause drowsiness (sleeping or cold medicine), those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep.

To reduce the danger of burns, death from electric shock, fire or other human injury:

- -Close supervision is necessary when this product is used by or near children or invalids.
- Use this product only for its intended use as described in this manual. Do not use accessories not recommended by the manufacturer.
- -Keep the cord away from heated surfaces.
- -Connect this product to a properly grounded outlet only.

This is an electrical product. Do not install it anywhere water is likely to get on the product or anywhere with humidity high enough that water is likely to form on the surface of this product. When using the product in a bathroom, install a fan or ventilation port and ensure good air flow through the bathroom. • Failure to do so may cause fire or electrical shock.



Always connect the NEOREST to the cold water supply.

Connecting to hot water supply may result in burns and equipment damage.

Check that an appropriate ground is installed.

• If the ground is not installed, if there is a breakdown or electrical current leak, the lack of a ground could cause electrical shock. For the ground, use copper wire with a ground resistance of 100 Ω max. and a diameter of 1.6 mm min.

* If there is no ground installed, ask the contractor who did the installation to install the ground.

Make sure that a properly grounded (3 prong) outlet has been installed.

• Failure to install a grounded outlet could cause electrical shock in the event of a malfunction or short circuit.

Check that the outlet for electrical power is as follows.

- Failure to do so may cause fire or electrical shock.
- a. Apply a current to the outlet (or device) through a differential residual current device (DDR) whose release current does not exceed 30 mA.
- b. Install the outlet (or device) and its wiring plug at least 0.60 m away from the outside of the shower tub or bathtub.
- * Check that the wiring in a. and b. above is complete. If the wiring has not been completed, ask the contractor who did the installation to do it.

Safety Precautions (Continued)

Insert the power plug securely into the outlet.

Check that the power cord is connected. (UK) Failure to do so may cause fire, heat or short circuit.

* When installing this product, observe the local laws and regulations regarding installation.

To unplug, hold the plug, not the cord. (Europe and Russia) Do not unplug by pulling the cord.

• Pulling on the cord may cause damage and result in fire or heat.

If the electric cord is damaged, avoid danger by having the manufacturer's repair department or equivalent specialist replace it.

Always disconnect the power plug from the outlet before cleaning, maintenance or inspection.

Always switch the breaker on the distribution board to OFF. (UK) • Failure to do so may cause electrical shock or malfunction. * Except when using "Wand cleaning"

Periodically remove dust and dirt from the power plug and make sure it is securely plugged into the wall outlet. (Europe and Russia)

Failure to do so may cause fire, heat or short circuit.
 Pull the plug out from the outlet and wipe clean with a dry cloth.

Always unplug the plug from the outlet before removing the top unit. Always switch the breaker on the distribution board to OFF. (UK)

• Failure to do so may cause fire or electrical shock.

When leaking battery fluid adheres to your body or clothes, wash it away with clean water.

• The fluid may damage your eyes or skin.

Do not use the product if the top unit is unstable.
Doing so may cause the top unit to come loose and fall, resulting in injury.

If the product is damaged, do not touch the damaged section. • Doing so may cause electrical shock or injury.

Replace it immediately.Do not apply strong force, mechanical shock, step on or stand on the toilet seat, toilet lid or top unit. Also do not place any heavy object on the toilet seat, toilet lid or top unit.

Doing so may cause cracking or cause the top unit to come loose and fall, resulting in injury.
Doing so may damage the product and cause injury or water damage.

Do not lift up this product by the toilet seat or lid.

Do not raise the toilet seat or lid while objects are resting on top of the toilet.

• Doing so may cause the top unit to come loose and fall, resulting in injury.

To reduce the danger of death from electric shock:

- -Do not use while bathing.
- -Do not place or store the product where it could fall or be pulled into a tub or sink.
- -Do not put in or drop into water or other liquid.
- Do not try to recover the product if it has fallen into water. Unplug it immediately. Always switch the breaker on the distribution board to OFF. (UK)

When cleaning or maintaining the plastic parts (top unit etc.) or the water supply hose, use a kitchen cleaner diluted with water. Do not use any of the following.



Toilet cleaner, household cleaner, benzene, paint thinner, powdered cleanser or nylon scrubbing pads.

- These items may damage or crack the plastic and cause injury or malfunction.
- These items could damage the water supply hose and cause a water leak.

To prevent a sudden water leak, do not remove the water filter drain valve when the shutoff valve is open.

- Doing so will cause water to spurt out.
- (Refer to Page 39 for instructions on cleaning the water filter drain valve.)

Do not fold or crush the water supply hose; do not damage by cutting with a sharp object.

• Doing so may cause water leaks.

Do not pour hot water into the toilet. • Doing so may result in damage to the toilet, injury or water damage.

Do not flush anything other than bodily waste and toilet paper. Also, do not flush too much toilet paper.

• Doing so may clog the toilet, causing waste water overflow and water damage.

Keep the bowl filled with water.

• Failure to do so may cause sewer gas, chlorine gas, or hydrogen sulfi de to corrode facilities and equipment.

Do not look directly at UV light.

May cause eye or skin irritation.

• There are no user replaceable parts. Shall be serviced by qualified personnel only.

Safety Precautions (Continued)

If a water leak should occur, always close the shutoff valve.

When the ambient temperature is likely to drop to 0°C or lower, prevent damage to the pipes and hoses due to freezing.

• Frozen water pipes could cause the top unit and the pipes to break, resulting in a water leak. • Regulate the room temperature to prevent the pipes and hoses from freezing during cold months.

When not using the NEOREST over an extended period of time, drain the water out of the top unit and the water supply hose, and pull the electrical plug from the outlet.

Switch the breaker on the distribution board to OFF. (UK)

- When using the product again, allow the product to refill with water first. Otherwise, the water in the tank might become contaminated and cause skin inflammation or other problems. (Refer to Page 54 for instructions on replenishing the water.)
- . Leaving the power on may cause fire or heat.

When installing the water filter drain valve, make sure that it is securely tightened in its proper position.

• Failure to securely tighten it may cause a water leaks.

If the bowl unit is clogged, disconnect the power plug and remove the clog. Switch the breaker on the distribution board to OFF and remove the clog. (UK)

- If the auto flush were allowed to function, it would make the wastewater in the bowl unit overflow and may result in water damage.
- Use any commonly available toilet plunger to remove the clogging.

Always flush, even after just urinating.

. Failure to do so may clog the toilet, causing waste water overflow and water damage or inadequate flushing of the bowl unit.

Wipe condensation on the bowl unit, tank, water supply pipe and shutoff valve with a drv cloth.

- . Condensation may cause staining and corrosion of the floor.
- Ventilate the restroom to prevent condensation.

Wipe any urine, condensation, cleaner, water, etc. that has gotten on the floor with a well-wrung mop or cloth.

• Failure to do so may cause staining and corrosion of the floor.

Make sure of the plus and minus signs on the batteries before inserting them. Remove depleted batteries immediately.

When replacing the batteries:

- Replace both batteries with new ones.
- Use the same brand for both new batteries (any brand available).
- Failure to do so may cause the batteries to leak fluid, generate heat, rupture, or ignite.

When the product is supposed not to be used for long time, remove the batteries from the remote control and battery box.

. Failure to do so may cause the batteries to leak fluid.

Operational Precautions

For prevention of malfunctions

• Do not block the body sensor or the remote control transmitter or receiver.


-< About the body sensors >-

- Body sensors detect a person standing in front of the bowl unit.
- · Body sensors emit an infrared beam as shown in the figures. When someone moves into the line of this infrared beam, the sensor detects the person.
- * Detection by the sensor may be difficult when the toilet is used by someone small, such as a child



-< About the seat switch >.

• When you sit on the toilet seat, the seat switch turns ON, enabling you to use various features. (A click sound is heard when the seat switch is ACTIVATED.)



- Sit back on the toilet seat.
- · The seat switch will not turn on unless you sit on the seat properly.



Note

- . When a child uses the NEOREST, the seat switch may not be ACTIVATED by their light body weight.
- · Since the toilet seat is designed to move up and down, a clearance is provided between the toilet seat cushion and the toilet bowl

For prevention of damage

- Wipe plastic areas such as the top unit and remote control with a soft, wet
- Dry cloth or tiss
- Do not lean against the toilet lid.

cloth.

Problem Prevention

- Disconnect the power plug if there is a risk of lightning. Switch the breaker on the distribution board to OFF. (UK)
- A toilet seat cover or a toilet lid cover cannot be used. (The body sensors or seat switch may not function properly.)




- Do not urinate on the top unit, toilet seat or wand. (Doing so may cause pink or brown stains or a malfunction.)
- Do not apply strong forces to the control panel of the remote control.
- When using a toilet cleaner to clean the toilet, wash it off within 3 minutes and leave the toilet seat and toilet lid open. Wipe off any cleaner that remains on the toilet bowl. (If vapor from a toilet bowl cleaner enters the top unit, it may cause a malfunction.)
- Do not expose to direct sunlight. (Doing so may cause changes in color, irregular heated seat temperature, remote control malfunction or NEOREST malfunction due to the change in temperature.)
- Use radios, etc. away from the NEOREST. (The NEOREST could cause interference with the radio signal.)
- If you use a booster seat for infants or a soft highchair, remove it after use.
- (Keeping it installed may prevent some of the functions from being used.)
- Do not apply force to the remote control. (May cause malfunction.)


To prevent the remote control from being dropped, set it in the hanger when you are not using it. Be careful not to expose it to water.

About rear cleansing, rear soft cleansing and front cleansing

- These functions wash away waste and dirt from a localized area of your body.
- Do not cleanse too much or for too long. Doing so may wash away normal bacteria, upsetting the balance of bacteria inside your body.
- People who are receiving medical treatment or therapy in this localized area should consult their doctor before use.





Parts Names

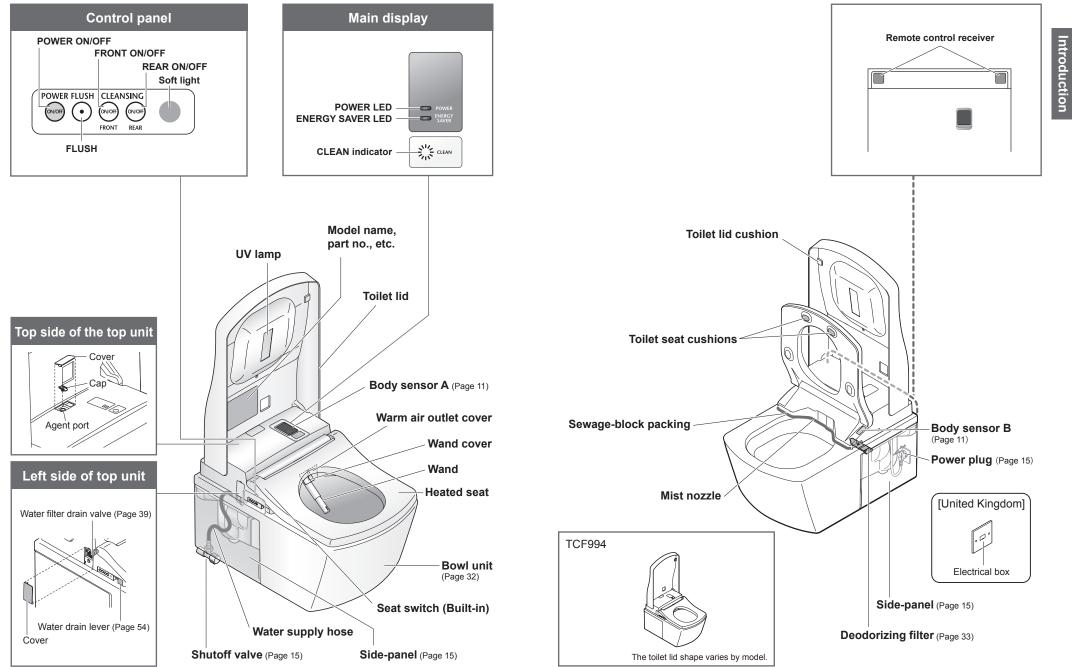

Preparation Using the Product for the First Time



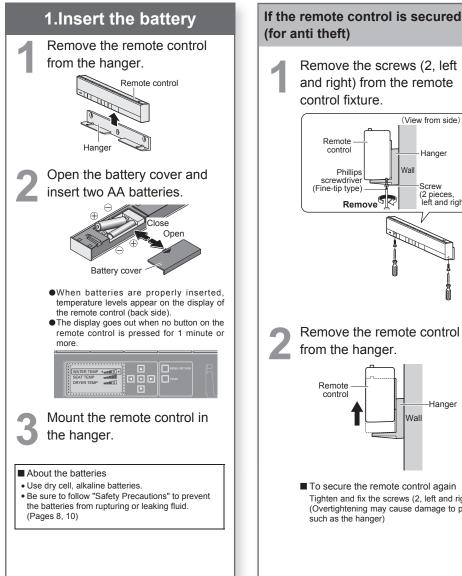

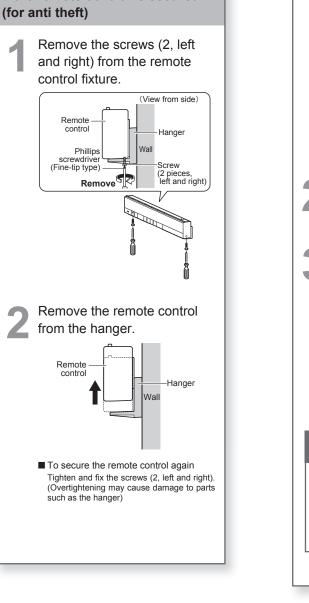

2.Turn on the power Remove the side-panel and Loosen the bottom screw of the side-panel (right) with a insert the power plug. flat-head screwdriver. pull the side-panel diagonally upward, and then pull it out downward. $\overline{}$ Switch the breaker on the distribution board to ON. (UK) Side-panel (right) . The wand extends and then retracts. · Flushes automatically. Pull up Screw Pull out (1) Loosen · Both side-panels can be removed or installed in the same way • Dropping the side-panels may cause damage. Check that the POWER LED on the main display is lit up. POWER FLUSH CLEANSIN • If it does not light up, press [POWER ON/OFF] to light it up. Reinstall the side-panel. (Europe and Russia) Keep the side-panel (right) aligned with the reference line for panel installation, and then tighten the bottom screw with a flat-head screwdriver. (1) Fit it in from (2) Keep it aligned with Reference line for below at an the reference line for nanel installation panel installation angle (3) Tighten 3. Open the shutoff valve To turn the power "OFF" Fully open the shutoff valve. POWER The shutoff valve is located in the side-panel (left). ON/OFF Press [POWER ON/OFF] to (Refer to the above for removal and installation.) turn the power off. • The POWER LED goes off.


Side-panel (left)


Basic Operations

Press a button on the remote control; a beep sounds when the top unit receives the signal.

[RE		anses your rea	ar.	·			0
Cleansing	[SO		es your n ONT]		mild water pi as a bidet fo		
Drying			ננ	DRYEF	R] Dries yo	our rear.	
Stopping [STOP] Stops the operation.							
[PRESSURE] •You can adjust the water pressure to or •When you press the button to flush, the positi •If you do not want to return the wand to [OSCILLATE] •The wand moves back and forth to w your rear thoroughly. •The setting changes between "ON" "OFF" each time the button is press [PULSATE] •Washes with the water press pulsating between soft and strong. •The setting changes betw "ON" and "OFF" each time the button is pressed. Low battery warning LE	on returns to to the standar rash (and () sed. r sure () eeen () e	the standard po ard position. (F OSITION] fou can adjust []] to the from When you press eturns to the s If you do not v standard posi Functions that during [REAR] Note Difting back on adjust the wan	PRES PRES	position). ition to c the rear) utton to f position eturn the ge 50) when a] or [FRC et seat m on and to	button is pre button is pre DNT] cleansing button is the cleansing button is the cleansing button is the cleansing button is the clean cle	sition n). ssed ng. er to	
FRONT PRESSURE	52) [US] You wat •To Wi wa an •To Pro	RSONAL S ER1] / [USE a can store you er temperature o store a settir hile cleansing i ter pressure, a d hold [USER o use esss [USER 1] e cleansing yo	R2] ur prefern e a settir ng is in prog and warn 1] or [USE or [USE	red wand ng. gress, set n water te SER 2] fo R 2], and	t your preferre emperature, a r 2 seconds o	ed wand pos and then pre or longer.	ition, ss


When flushing and opening/closing the toilet lid and toilet seat with the remote control

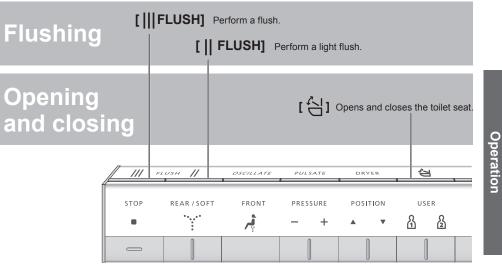


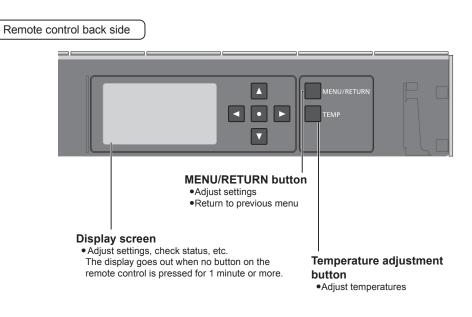

Basic Operations About the Menu Screen


Set up easily with simple steps!

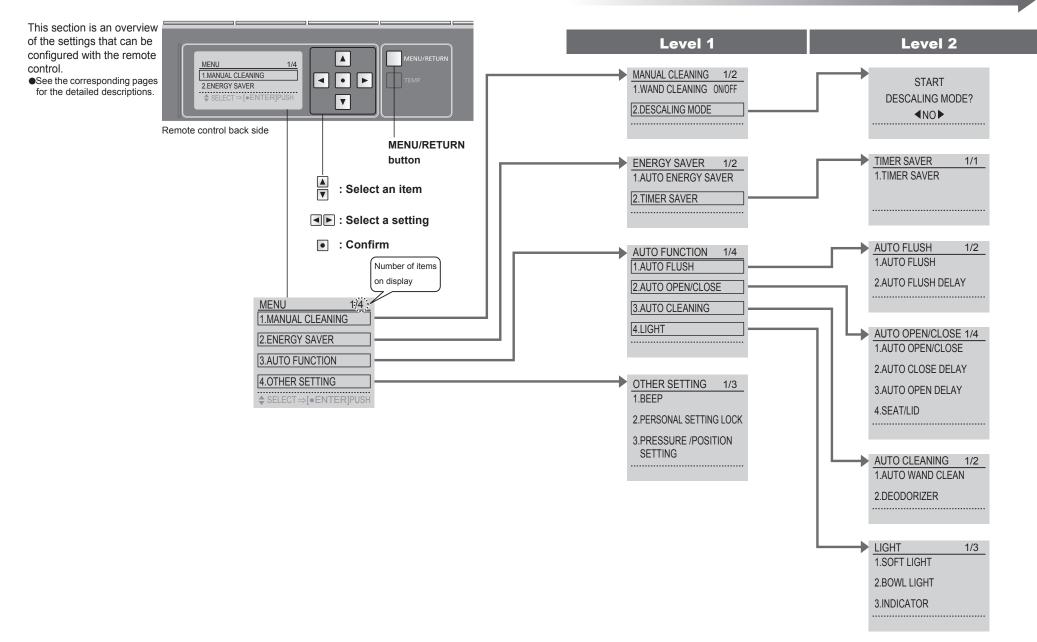

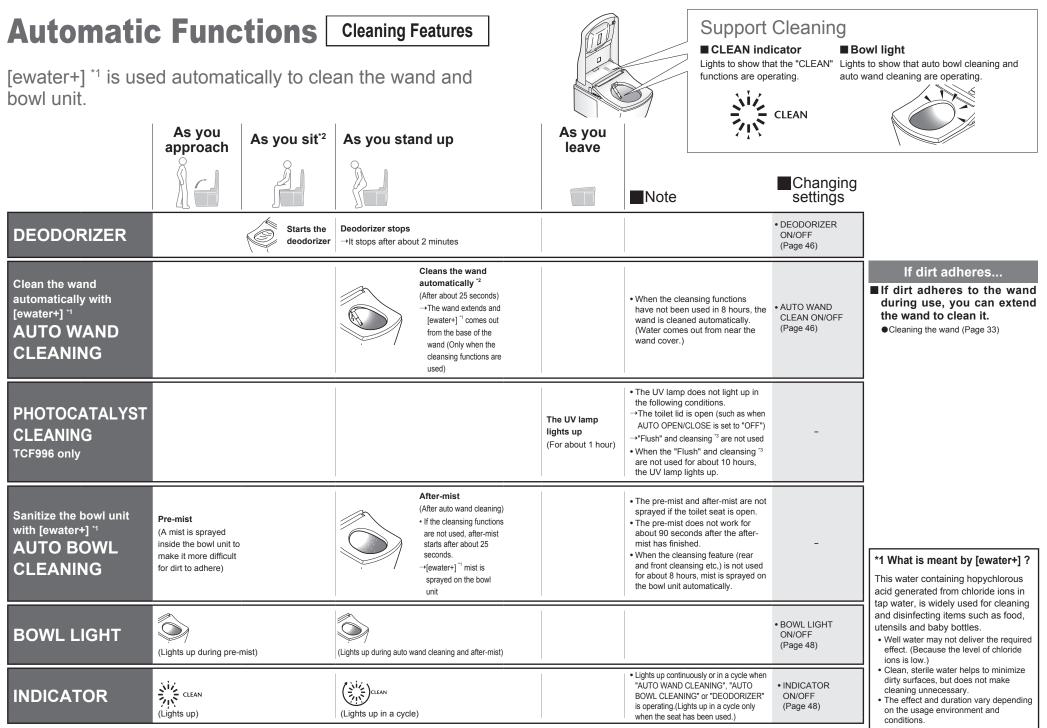


 $^{\ast}2$ Water comes out from around the wand.

Operation

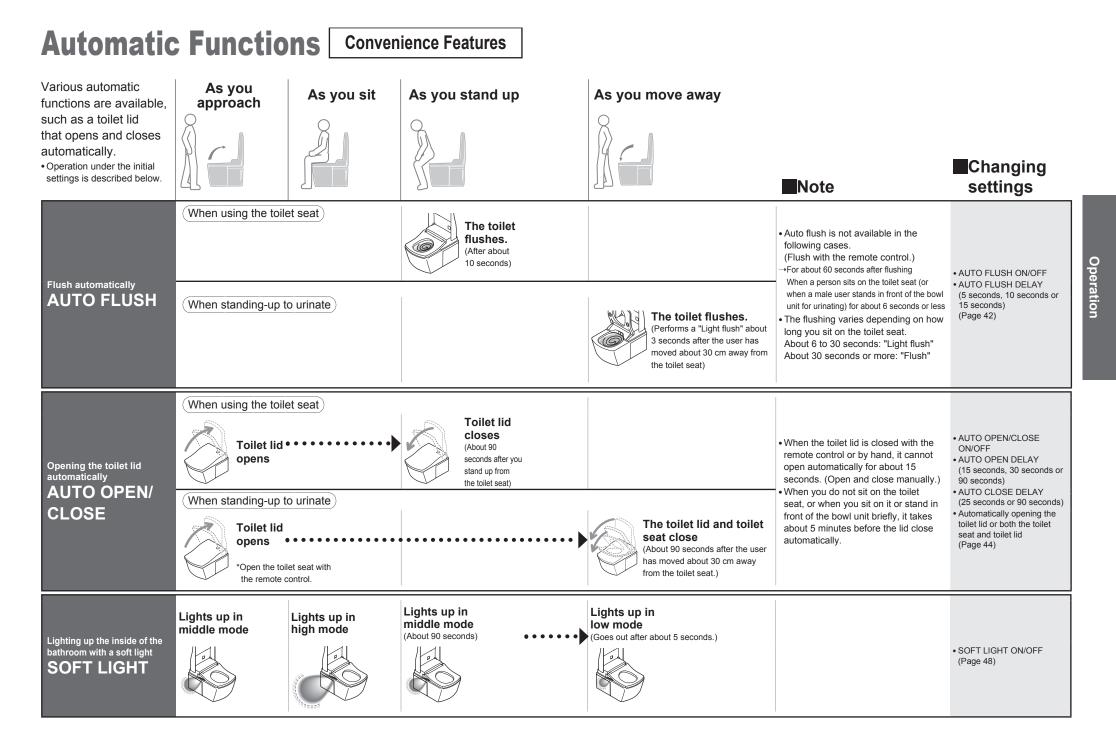

Temperature Adjustment Warm Water / Toilet Seat / Drying

You can adjust the temperature levels or turn the settings to "OFF".

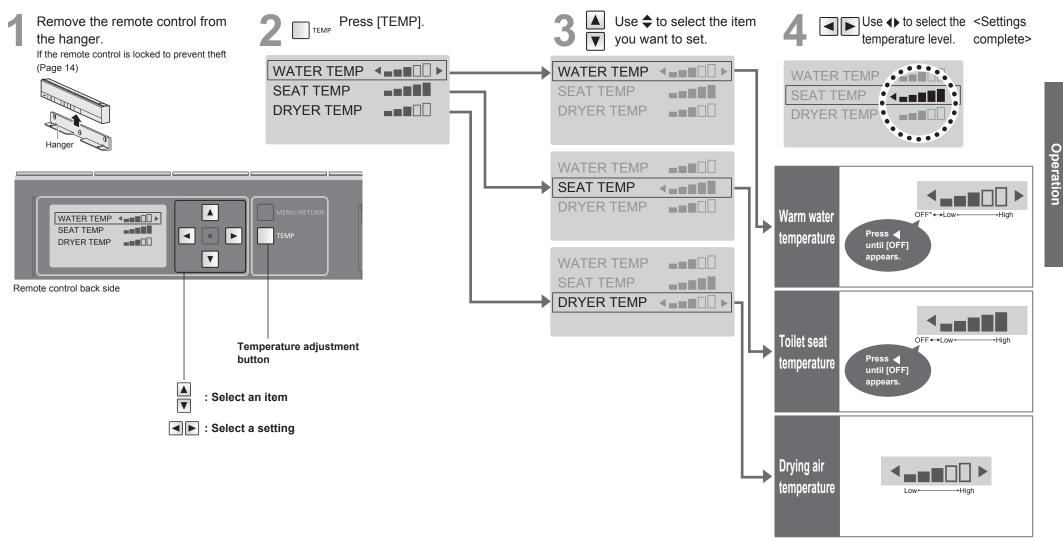

^{*}To prevent condensation, the water temperature does not drop below 20°C even when set to "OFF".

Energy Saver Features Type

You can save energy by turning the toilet seat heater to a low temperature (or turning the heater "OFF") during periods when the toilet will be used infrequently. • It takes about 10 days for the product to determine the periods when it is used relatively less frequently.

Tara	Othersting	When energy saver is set	When energy say	ver is in operation	AM F	PM
Туре	Situation	Main Display		Toilet seat heater	0 6 8	5 9 0
AUTO ENERGY SAVER	You want to save energy but dislike a cold toilet seat The NEOREST detects time periods with infrequent use and lowers the toilet seat temperature automatically.	Power ENERGY SAVER Green	→ Power Energy Saver Orange	Low	Example: Used infrequently from 9 pm Set temperat	
TIMER ENERGY SAVER	You want to save energy only for the preset duration of time. If you set the duration of time (3 hours, 6 hours or 9 hours) during which you want to save energy, the heater automatically turns off every day in the set time slot.	When energy saver is not set	→ Power ENERGY SAVER Green	OFF	Example: Set from 8 am to 5 pm Set temperature'1 OFF '3	Set temperature*1
AUTO ENERGY SAVER + TIMER ENERGY SAVER	You want to save a lot of energy with auto energy saver and timer energy saver When both timer energy saver and auto energy saver are set, auto energy saver operates when timer energy saver is not operating.	Power ENERGY SAVER Off	 During timer energy saver : Same LED indication as timer energy saver (See above) During auto energy saver : Same LED indication as auto energy saver (See above) 	Low	Example: When timer energy saver and auto e Set temperature' OFF *3	Set temperature" Low temperature

(Note)

•Even if the toilet seat heater is set to "Low" or "OFF", the toilet seat is temporarily heated when you sit on it.

*1 The toilet seat temperature set on Page 24.


*2 The time period when the toilet seat heater is set to a low temperature by the auto energy saver.

*3 The time period when the toilet seat heater is "OFF".

Operation

Energy Saver Features How to set

Set the timer energy saver at the time you want to start it.

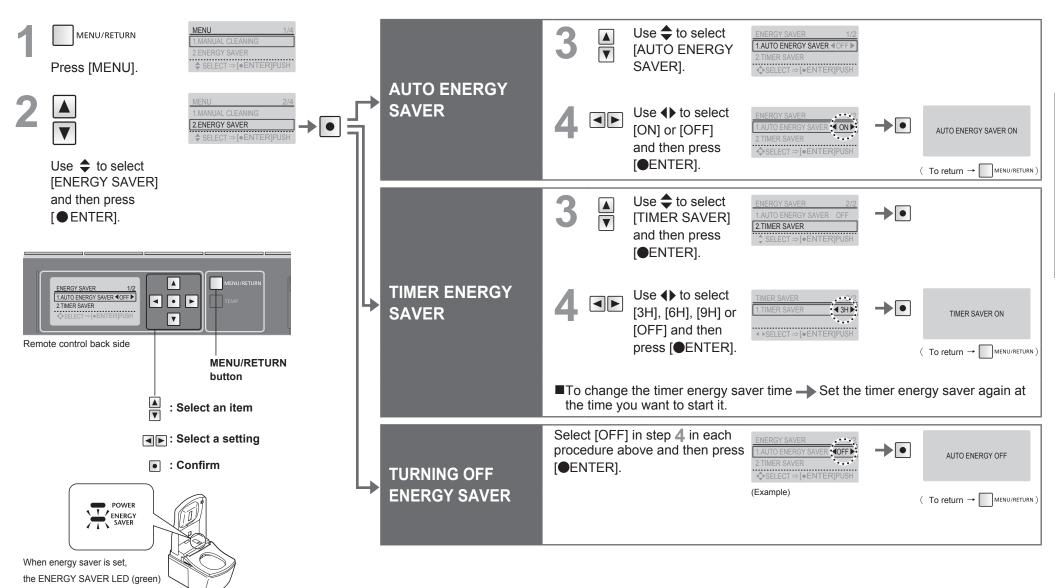


Operation

lights up.

Maintenance Power plug




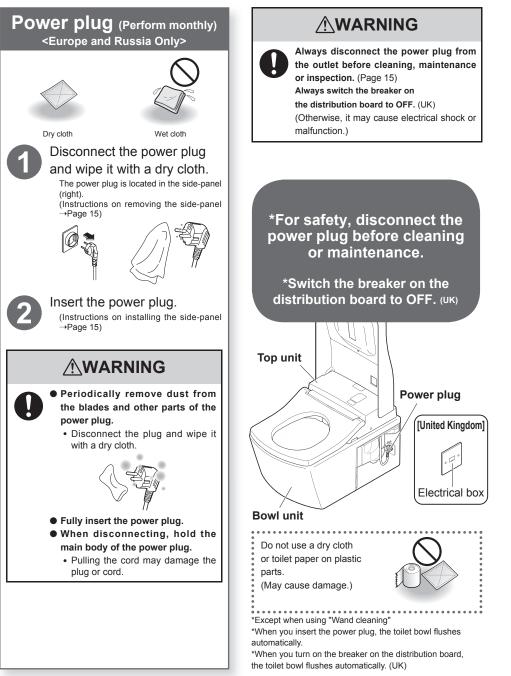


Top unit


Caution with use of detergent

- The NEOREST is an electric appliance. Be careful not to let water seep inside or leave detergent in the gap between the top unit and bowl unit. (May damage plastic parts or cause a malfunction.)
- When using a toilet cleaner to clean the toilet, wash it off within 3 minutes and leave the toilet seat and toilet lid open.
 - · Wipe off any cleaner that remains on the toilet bowl. (If vapor from a toilet bowl cleaner enters the top unit, it may cause a malfunction.)
- Do not use any water repellant, stain-proofing cleaner or surface coating agent. These products would not damage the porcelain surface, but they may cover the porcelain surface and reduce the effect of the built-in stain prevention technology.

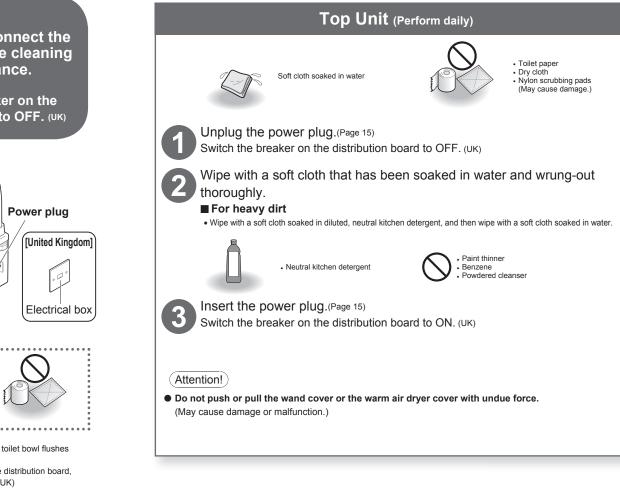


Maintenance Bowl unit

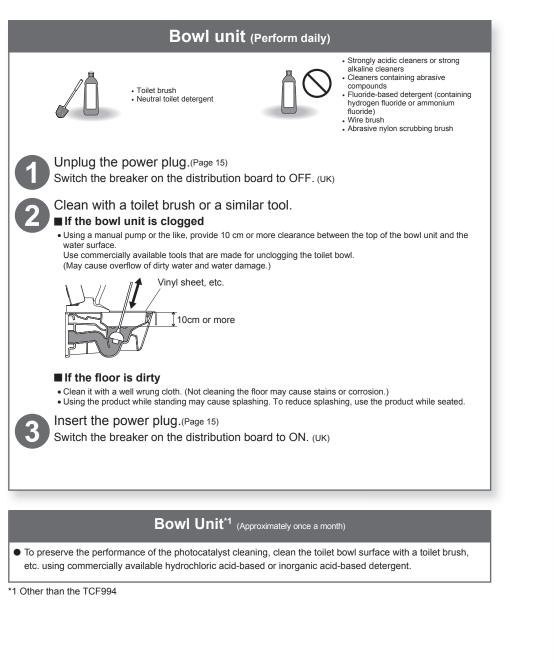

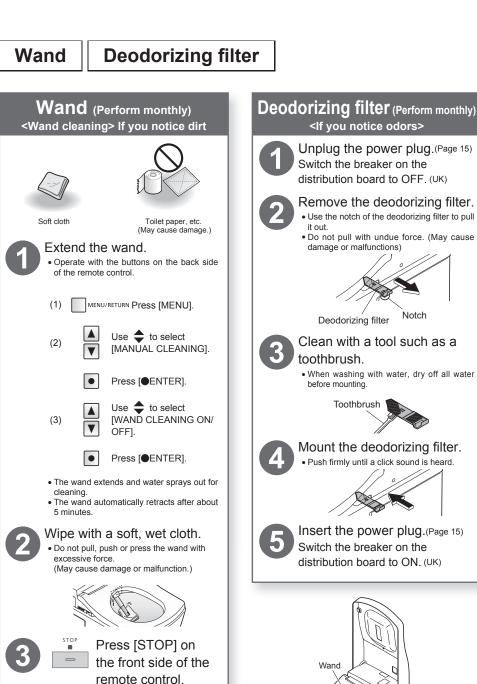


• The wand retracts.

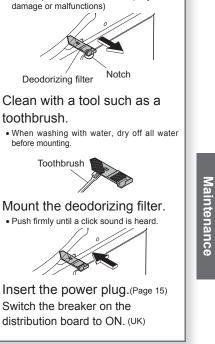





Maintenance Descaling mode

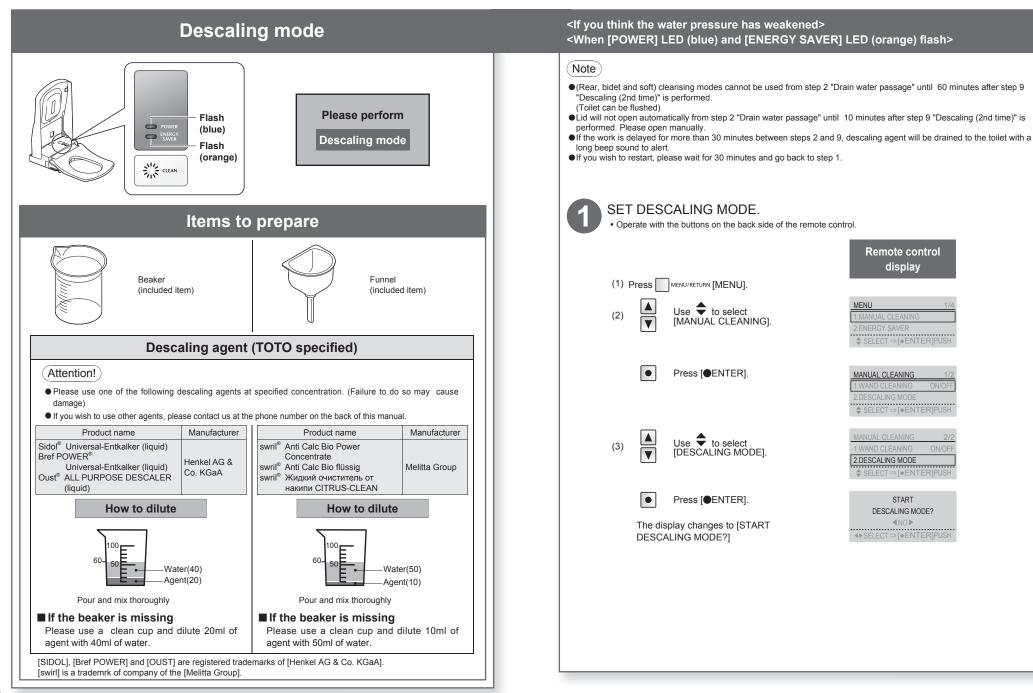


Maintenance Descaling mode

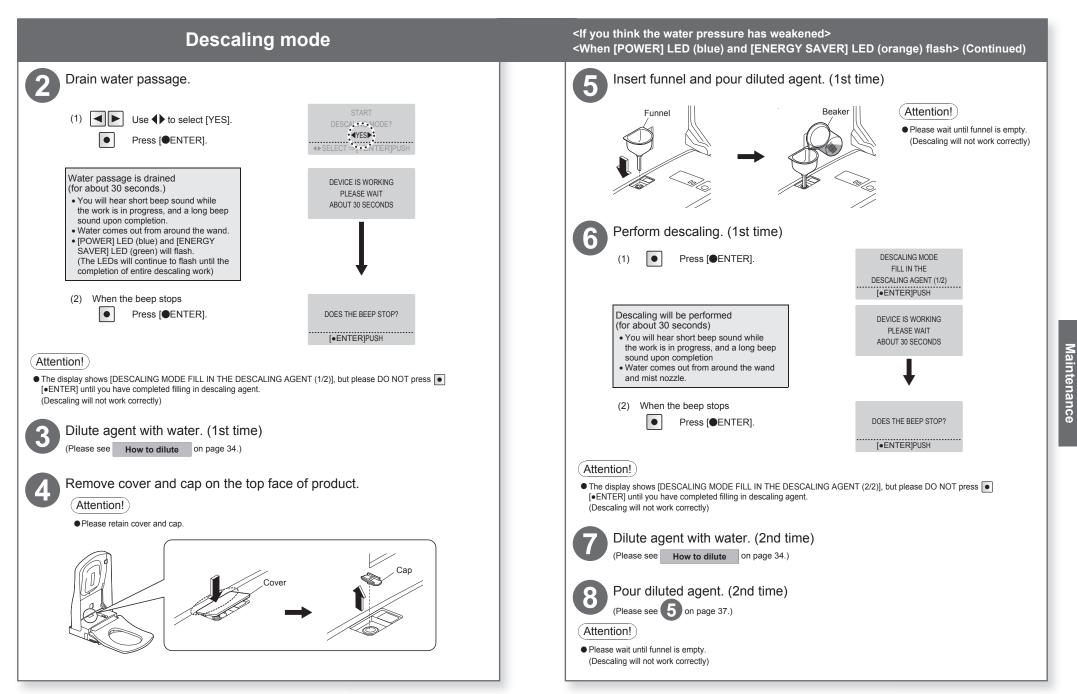

Maintenance Descaling mode

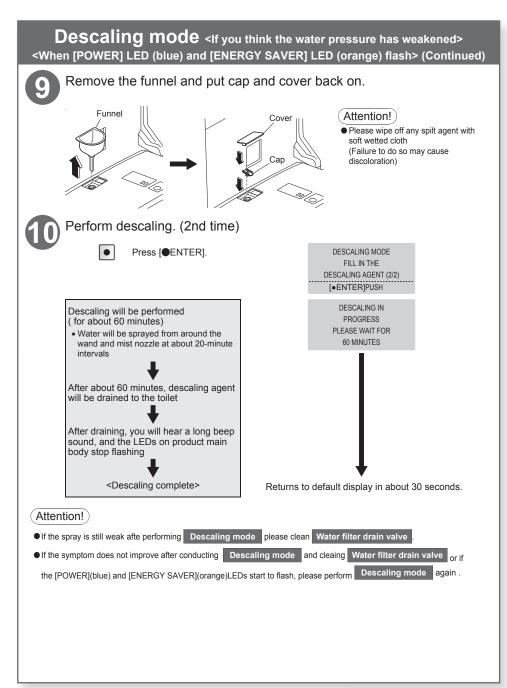

Water Filter Drain Valve

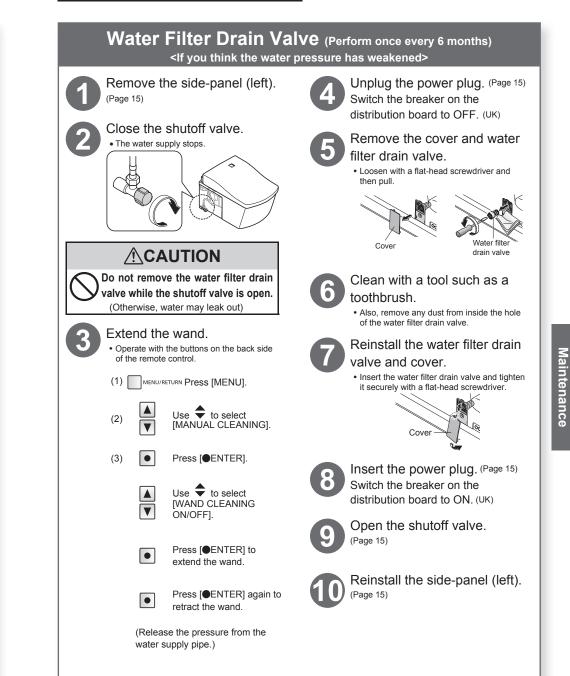

Changing Settings Setting List




Remote control back side

		Setting Types		Available Settings*	Setting Ref.Page
		AUTO FLUSH	 Set whether or not to clean the bowl unit automatically 	ON/OFF	- Page 42
AUTO FLUSH	AUTO FLUSH DELAY	Change the amount of time before the toilet flushes automatically	5S/10S/15S	Faye 42	
		AUTO OPEN/CLOSE	 Set whether or not to open the toilet lid automatically 	ON/OFF	
	AUTO	AUTO CLOSE DELAY	 Change the amount of time before the lid/ seat closes automatically 	25S/90S	
OPEN/CLOSE AUTO OPEN DELAY	 Change the amount of time after which the lid/seat opens automatically upon closing it with hands 	15S/30S/90S	Page 44		
AUTO FUNCTIONS		SEAT/LID	Automatically open and close the toilet lid/ Automatically open and close the toilet seat and toilet lid	LID/SEAT·LID	
	AUTO CLEANING	AUTO WAND CLEAN	 Set whether or not to clean the wand automatically 	ON/OFF	– Page 46
	AUTO CLEANING	DEODORIZER	 Set whether or not to deodorize automatically after sitting on the toilet seat 	ON/OFF	r age 40
		SOFT LIGHT	Set whether or not to use the soft light	ON/OFF	
	LIGHT	BOWL LIGHT	 Set whether or not to use the light inside the bowl unit 	ON/OFF	Page 48
		INDICATOR	Set whether or not to light up the CLEAN indicator	ON/OFF	
	BEEP		Set whether or not to make a beep sound	ON/OFF	
OTHER SETTINGS	PERSONAL SETT	ING LOCK	 Set whether or not to use the personal setting lock 	ON/OFF	Page 50
	PRESSURE/POSIT		 Set whether or not to keep your favorite pressure and position settings 	ON/OFF	

*The black text is the initial setting.

AUTO FLUSH

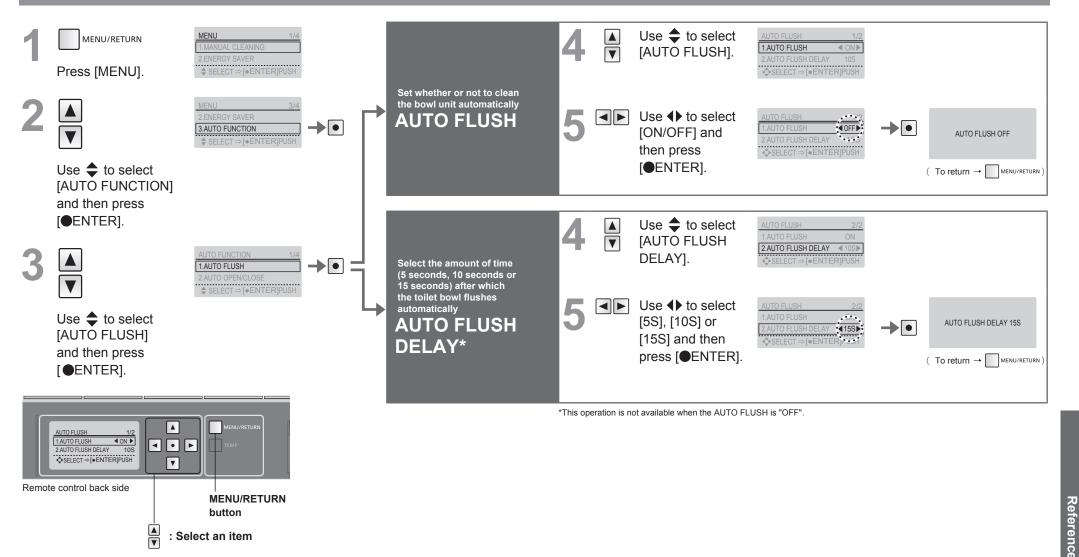


: Select an item

- Image: Select a setting
- : Confirm


Items set on this display 1. AUTO FLUSH 2. AUTO FLUSH DELAY


AUTO OPEN / CLOSE

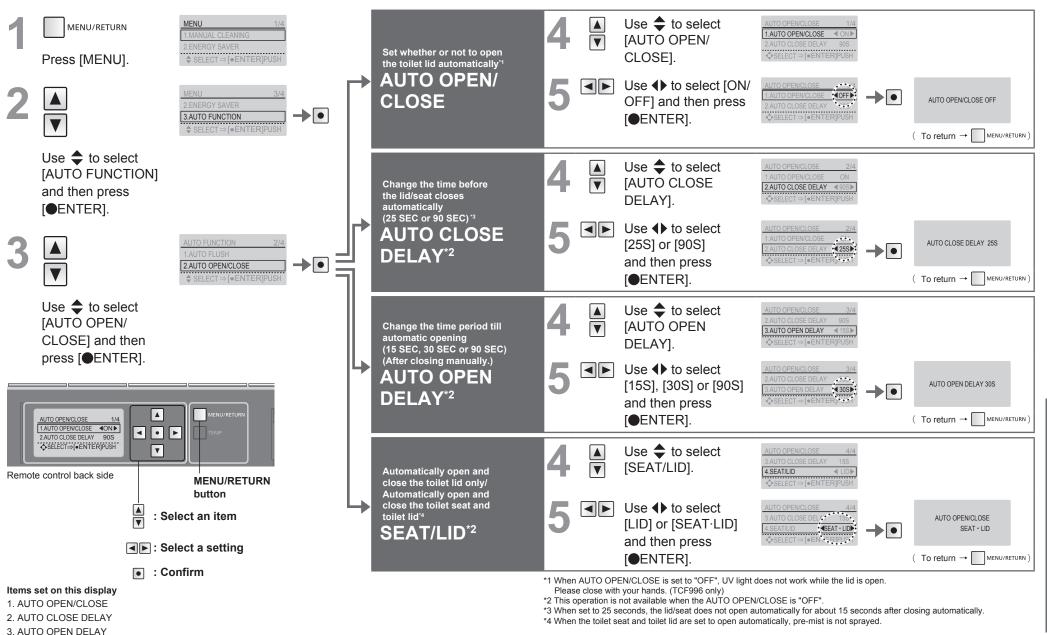

Reference

AUTO CLEANING

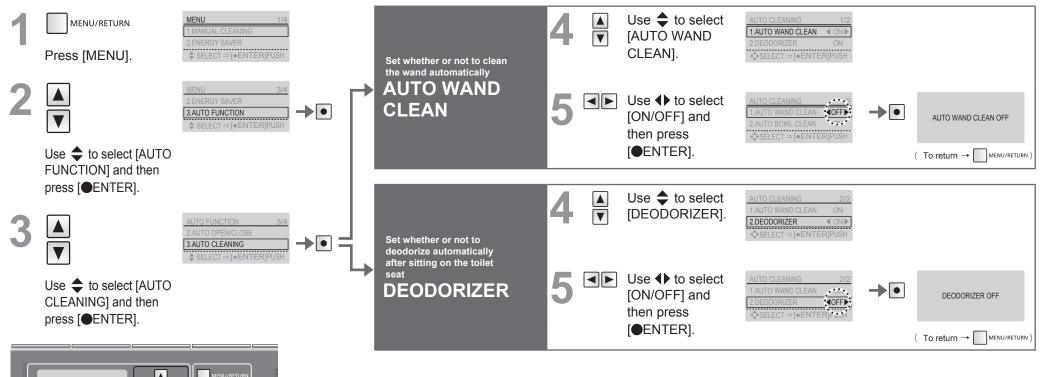


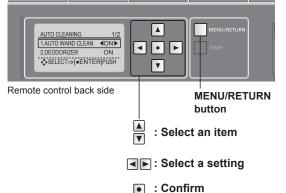

Items set on this display

1. AUTO WAND CLEAN 2. DEODORIZER


LIGHT

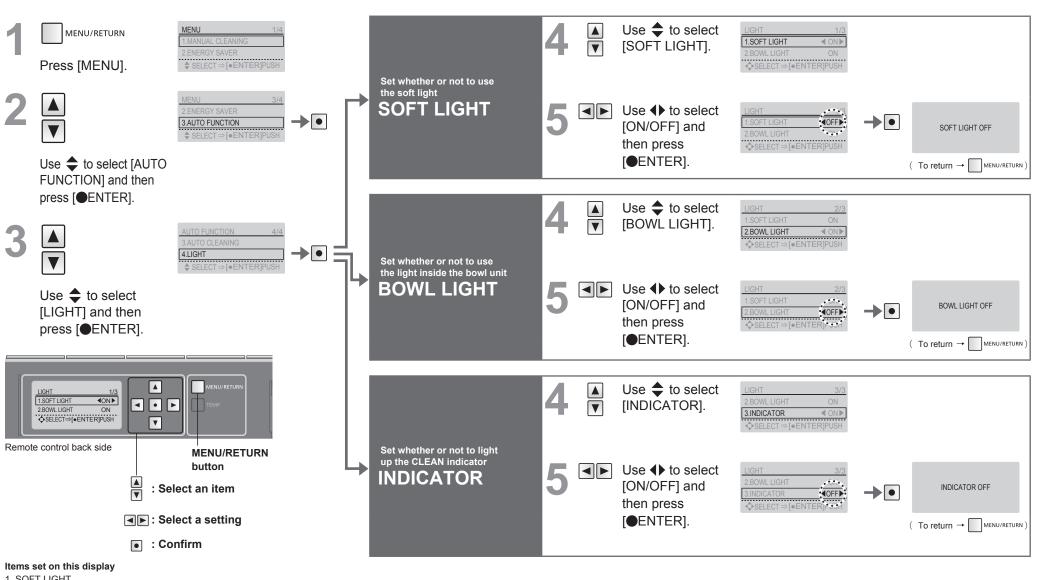


SOFT LIGHT
 BOWL LIGHT
 INDICATOR

Reference

OTHER SETTING

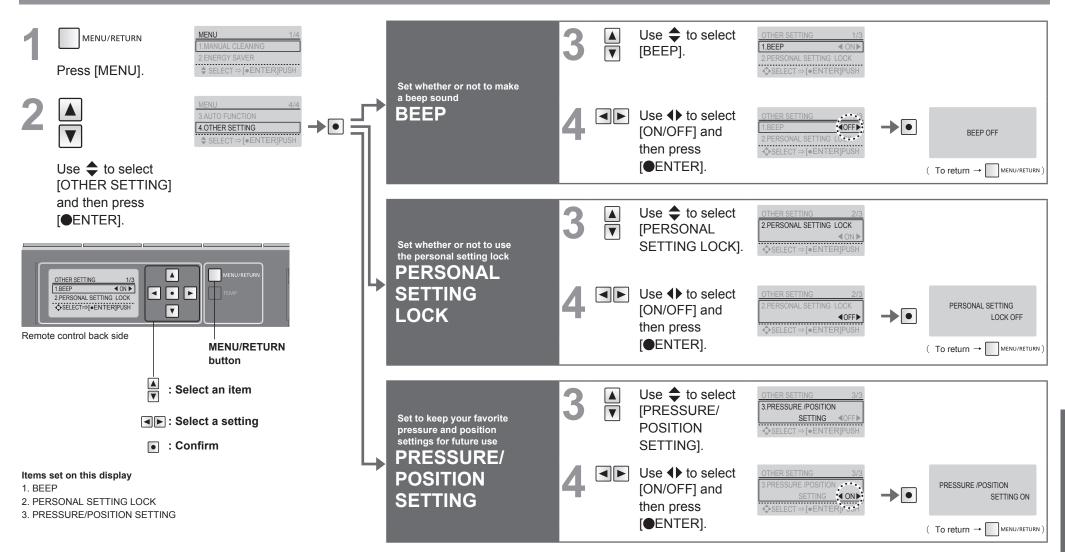

What to Do?

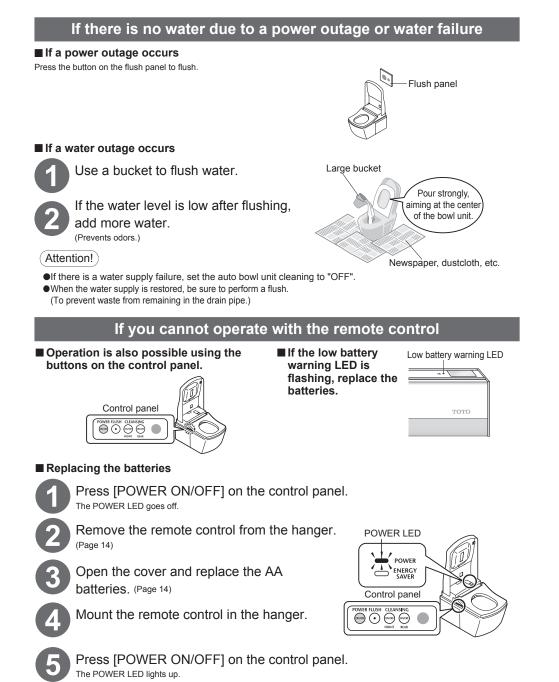

What to Do? Freeze Damage Prevention

When the ambient temperature is likely to drop to 0°C or lower, take measures to prevent freezing.

(Attention!)

When the ambient temperature is likely to drop to 0°C or lower, do not use the energy saver feature. (May damage the product.)
 Warm the bathroom or take measures against freeze so that the ambient temperature does not drop below 0°C.

•Before starting work, set "AUTO FLUSH" (Page 42) and "AUTO OPEN/CLOSE" (Page 44) to "OFF".

Anti freezing

3

How to drain the water

- Remove the side-panel (left) and close the shutoff valve. (Page 15,Page 55) Drain the pipe.


2.

3.

- Extend the wand.
 Operate with the buttons on the back side of the remote control.
- 1. MENU/RETURN Press [MENU].
 - Use to select [MANUAL CLEANING].
 - Press [●ENTER].
 - Use 🔷 to select [WAND CLEANING ON/OFF].

Press [●ENTER] to extend the wand.

- Hold the wand in the extended position until no more water comes from around the wand. Press [●ENTER] again to
 - retract the wand.
- (Release the pressure from
- the water supply pipe.)
 Unplug the power plug. (Page 15) Switch the breaker on the distribution board to OFF. (UK)
- (3) Remove the cover and water filter drain valve.

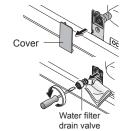

(4) After draining the water, install the water filter drain valve and cover. Insert the water filter drain valve and use a flat-head screwdriver to tighten it securely.




- (5) Insert the power plug. (Page 15) Switch the breaker on the distribution board to ON. (UK)
- Check that the POWER LED on the main display is lit up. (Page 15)
- Set the toilet seat temperature to "High". (Page 24)
- (To maintain the temperature.)When finished, close the toilet seat and toilet lid.
- Reinstall the side-panel (left).

■ To use the NEOREST again

• The water needs to be replenished. (Page 54)

What to Do? Long Periods of Disuse

If the toilet is in a location you will not visit for a long time, drain the water. (The water in the tank may become contaminated and cause skin irritation or other problems.)

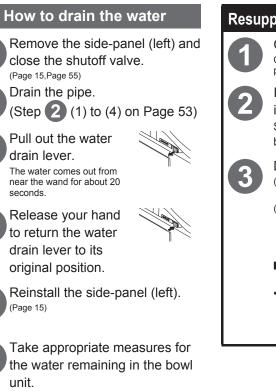

Putting antifreeze in the water remaining in the toilet bowl will reduce its chance of freezing.

■ To use the NEOREST again

5

• The water needs to be replenished. (See right)

Resupplying the Water (After draining)

Open the shutoff valve. Check that water is not leaking from a pipe or the top unit.

If the power is not turned ON

insert it. (Page 15) Switch the breaker on the distribution board to ON. (UK)

Discharge water from the wand.

- Pressing down the left side of the toilet seat,
- (2) Press the [REAR] on the remote control to discharge water from the wand. (Catch the water in a paper cup or other receptacle)

If the remaining water has frozen and no water comes out

 Heat the inside of the bathroom, and warm the water supply hose and shutoff valve using a cloth soaked in warm water.

Troubleshooting

First, try the actions described on pages 55 to 62. If the problem persists, consult the installer, seller or the contact listed on the back cover of this manual.

● The CLEAN indicator does not light up. (It is time for parts replacement. → Page 61)



Please check first Does the LED light up when you press [POWER ON/OFF] on the top unit? Is the breaker on the distribution board turned on? → Check whether there is a power outage or the breaker has turned "OFF".

POWER FLUSH CLEANSING POWER FLUSH CLEANSING POWER FLUSH CLEANSING POWER ON/OFF

Is the ENERGY SAVER LED lit?


Is the


POWER LED lit?

■ While the LED is lit, energy saver (Page 26) is in operation, so the toilet seat temperature may be reduced or the heater may be turned off.


Is the remote control working?

- Is the Low Battery Warning LED on the top surface of the remote control flashing? → Replace the batteries. (Page 52)
- → Replace the batteries. (Page 52)
 Is the remote control transmitter or the remote control receiver blocked?
 → Remove obstructions, dirt, water









Battery cover

Remote control receiver



Reference

	F	Rear and front cleansing, wand	
Trouble		Please check	Ref. Page
		● Can you operate with the control panel? (Check while sitting on the toilet seat.) → Check "Is the remote control working?"	12 55
		• When the temperature is low, it takes time for the wand to come out after the remote control button is pressed because the water must be warmed up first.	-
		 ● Did you sit on the toilet continuously for 2 hours or longer? (If so, operation is stopped for safety purposes.) → Stand up from the seat and then use again. 	-
The wand (or cleansing water) does not come out		 If the water supply pressure drops significantly, for example if water is used elsewhere or if there is a water failure, the function may stop for safety. → Disconnect the power plug and wait about 10 seconds before inserting it again. Switch the breaker on the distribution board to OFF and wait about 10 seconds before inserting it again. (UK) If the same symptom reappears → There may be a malfunction. Consult with the contact listed on the back cover of this manual. 	-
		● The seat sensor may have difficulty detecting some sitting postures. → Sit back on the toilet seat.	11
		● Are you using a toilet seat cover, a toilet lid cover or a seat for infants? → Remove any covers. When using a seat for infants or a soft highchair, remove after each use.	11
		 ● Has a water failure occurred? → Press the [STOP] button and wait until water service is restored. 	-
The wand extends but		● Is the shutoff valve closed?	15
the cleansing water does not come out /		● Is the Wand clogged? →Please perform Descaling mode.	34
The cleansing water pressure is weak		 Is the water filter drain valve clogged with foreign matter? → Clean the filter. 	39
		• Is the water pressure set to a low level?	16
The cleansing water is cold		 Is the water temperature set to "OFF" or a low level? When the temperature of the water supply or the bathroom is low, the water temperature may be low when first sprayed. 	24 -
Stops in the middle of use		 Rear, rear soft and front cleansing stop automatically after 5 minutes of continuous use. After that, the POWER LED (blue) and the ENERGY SAVER LED (green) on the display of the top unit flicker for about 60 sec. in order to prepare hot water. → Wait until the LEDs on the display of the top unit light up solidly and then press the button again. Does the seat switch have difficulty detecting? → Sit back on the toilet seat. If you get up slightly from the seat, or sit forward on the seat, the seating switch may temporarily stop detecting your 	- 11
Water comes out unexpectedly from the wand		 presence. Water comes out from the area around the wand for several seconds after you sit on the toilet seat. Has the CLEAN indicator lit up in a cycle? The wand is cleaned with [ewater+]. 	20

	Warm air drying	
Trouble	Please check	Ref. Page
The dryer temperature is low	• Is the remote control preset temperature set to a low level?	24
Stops in the middle of use	 The feature stops automatically after 10 minutes of continuous use. Does the seat switch have difficulty detecting? → Sit back on the toilet seat. If you get up slightly from the seat, or sit forward on the seat, the seating switch may temporarily stop detecting your presence. 	- 11
	Flushing	
Trouble	Please check	Ref. Page
The toilet does not flush even when the	 Are you pressing the button repeatedly? [FLUSH] button cannot be used to activate a flush repeatedly. After about 20 sec. pass, press the button again. 	-
button is pressed	● Is water available from the water supply? → Use a bucket full of water to flush.	52
The bowl unit does not clean automatically or timing is delayed (Auto bowl unit cleaning)	 Is "AUTO FLUSH" set to "OFF"? → Set to "ON". Even if "AUTO FLUSH" is set to "ON", it is not available in the following instances. 60 seconds after the toilet is flushed → After 60 seconds have passed, flush using the remote control. When the amount of time seated on or standing in front of toilet seat is about six seconds or less → Flush with the remote control. After using the toilet while standing and not moving away from the front of the toilet. → Step away from the toilet and wait for about three seconds. When water droplets or dirt are disrupting the body sensor. → Remove the dirt. The seat sensor may have difficulty detecting some sitting postures. → Sit back on the toilet seat. 	42 22 11 11
	 The timing for the auto bowl unit cleaning can be changed. (After about 10 seconds → after about 5 or 15 seconds) 	42
The toilet flushes on its own	 Is "AUTO FLUSH" set to "ON"? Does the seat switch or the body sensor have difficulty turning on or detecting? →Sit back on the toilet seat. If you lift your hip off the toilet seat during use or sit forward on it, the seat switch may not turn on, and thus auto flushing may occur during use. →Remove any dirt that is on the body sensor. 	42 11
	 When you insert the power plug into the outlet, the toilet bowl flushes automatically. When you turn on the breaker on the distribution board, the toilet bowl flushes automatically. (UK) 	-

Flushing				
Trouble		Please check	Ref. Page	
		 Is the water supply to the toilet disrupted by other running water fixtures? → Cease using other fixtures and then flush the toilet. 	-	
Waste material does not flush down completely		 Are the flush and light flush buttons being used correctly? Flush (for solid waste): Up to 10 m of toilet paper (single) Light flush (for liquid waste): Up to 3 m of toilet paper (single) 	17	
		 ● Flushing may be difficult depending the consistency of the waste material. → Flush the toilet again. If the bowl unit is not cleansed with a flushing, remove the stains with a brush or similar instrument. 	-	
Some barium remains after flushing		 It may be difficult to flush down substances with a higher specific gravity than water, such as barium. →Flush the toilet again. If the bowl unit is not cleansed with a flushing, remove the stains with a brush or similar instrument. 	-	
There is residue on the bowl unit surface		 Oil and other hard-to-see grime may stick to the bowl unit surface. → Clean the bowl with (non-abrasive) neutral toilet detergent. 	32	

Toilet Seat and Toilet Lid (AUTO OPEN/CLOSE) Trouble Please check ● Is "AUTO OPEN/CLOSE (LID)" set to "OFF"? → Set to "ON". 44 Does the body sensor have difficulty detecting? 11 → Remove any dirt that is on the body sensor. • Even when set to "ON", AUTO OPEN/CLOSE (LID) is not performed for about 15 seconds after the toilet seat or toilet lid is closed. 22 • When the toilet lid is closed by hand The toilet lid does not (To make the NEOREST more user-friendly, a time interval is set from when the lid is closed to when it will open next.) open automatically → Leave the bathroom, and then after 15 seconds or more, approach the bowl unit. Is "AUTO OPEN WAITING TIME" set to 30s or 90s? 44 Is a toilet seat or lid cover installed? 11 →Remove any covers. ● Is "AUTO OPEN/CLOSE (LID)" set to "OFF"? → Set to "ON" 44 • When you do not sit on the toilet seat, or when the time spent sitting on the 22 toilet seat or standing in front of it is 6 seconds or less, the toilet seat and The toilet lid does not toilet lid close after about 5 minutes. close automatically If they do not close automatically even though "AUTO OPEN/CLOSE (LID) " is set to "ON", the body sensor may be detecting incorrectly. 11 → If there is a reflective object in front, such as a mirror or glass, move the reflective object or use a curtain or other object to block it. • Is the sensor directly exposed to sunlight? →Do not directly expose the sensor to sunlight, because it may cause incorrect detection. The toilet lid opens • Is there a heater within the detection range of the body sensor? 11 \rightarrow Do not place within the detection range of the sensor. on its own Is a urinal or wash basin also installed in the bathroom? → The sensor may detect someone using the urinal, causing the toilet lid to open or close. ● Is "AUTO OPEN/CLOSE (LID)" set to "ON"? 44 The toilet lid closes • IS AUTO CLOSE WAITING TIME set to 25s? • The seat switch may have difficulty detecting some sitting postures. on its own 11 → Sit back on the toilet seat The toilet lid and • Are the settings configured to open the toilet lid and toilet seat at the same toilet seat open at 44 time? the same time • If the lid or seat hits an obstruction the first time it opens after inserting the power plug, it may stop (or close) partway during the next operation. →While there are no obstructions, disconnect the plug and insert it again after about 5 seconds. Then press the "OPEN/CLOSE (Seat)" button on Stops (or closes) the remote control.

 Stops (or closes)

 If the remote control.
 If the lid or seat hits an obstruction the first time it opens after switching ON the breaker on the distribution board, it may stop (or close) partway during the next operation. (UK)

 Eliminate any obstructions and switch the breaker on the distribution board to OFF. Switch it to ON again after about 5 seconds. Then press the "OPEN/CLOSE (Seat)" button on the remote control. (UK)

 Cannot open or

 If it opens automatically

close with the

remote control

→ Check "Is the remote control working?"
 → Check "Is the remote control working?"
 Incorrect detection may occur when operating under fluorescent lights.

Toilet Seat and Toilet Lid			
Trouble		Please check	Ref. Page
		● Is the toilet seat temperature set to "OFF" or a low level?	24
The toilet seat does not get warm		 Is the ENERGY SAVER LED (green) lit? Timer energy saver is operating and has turned off the toilet seat heater. →When you sit on the seat, the heater is turned on temporarily and the seat is warmed in about 15 minutes. Is the ENERGY SAVER LED (orange) lit? The toilet seat temperature has been lowered to save energy (The auto energy saver in operation). →When you sit on the seat, the heater is turned on temporarily and the seat is warmed in about 15 minutes. 	26
		 ● Have you been seated for a long time? • After about 20 minutes of sitting, the temperature starts going down, and after about 1 hour, the heater is turned "OFF". →Move away from the toilet seat and then go back. 	-
		 The seat switch may have difficulty detecting some sitting postures. → Sit back on the toilet seat. 	11
		● Is a toilet lid or seat cover installed? → Remove any covers.	11

Energy Saver					
Trouble		Please check			
The timer energy- saver feature is not working		 ● Did you replace the remote control batteries? • When the batteries are discharged, the settings may be erased. → Reconfigure the setting. 	14 28		
The auto energy- saver feature is not working		● Because the function takes several days learning the usage conditions before starting energy saver, the amount of energy saving may be low, depending on the frequency of use. → Check the type of energy saver.			
		Deodorizer			
Trouble		Please check	Ref. Page		
The deodorizer seems to be not working		 Even after sitting down, you do not hear operation sounds. → Sit back on the toilet seat. If you hear an operation sound when you sit on the toilet seat. → Clean the deodorizing filter. 	11 33		
A strange odor is emitted		 Are you using an air freshener or deodorizer that you purchased separately? Doing so may reduce the effectiveness of the NEOREST deodorizer or cause strange odors. →Remove the air freshener or deodorizer. 	-		

● Is "DEODORIZER" set to "OFF"?

→ Set to "ON".

		Sanitary		
Trouble		Please check	Ref. Page	
The soft light or bowl light does not light up		● Is the setting "OFF"? → Set to "ON".		
Pre-mist / after-mist is weak		 Is the mist nozzle clogged? → Perform Descaling mode. Is the water filter drain valve clogged with any dust? → Clean the filter. 		
Pre-mist / after-mist is not sprayed		 The following functions do not work when the toilet seat is open. Is "Seat/lid" of "Auto open/close" set to "Seat-lid"? → You can change it to "Lid". The pre-mist is not sprayed for about 90 seconds after the after-mist has finished. Is the mist nozzle clogged? → Perform Descaling mode. Is the water filter drain valve clogged with any dust? → Clean the filter. 		
The mist sprays out spontaneously		 When body sensor A detects someone, the pre-mist is sprayed. When the cleansing functions have not been used in 8 hours, mist is sprayed inside the bowl unit automatically. 		
The UV lamp illuminates the inside of the toilet bowl. (TCF996 only)		 When the cleansing functions have not been used in 10 hours, the UV lamp lights up. 		
The CLEAN indicator does not light up		 Is the setting "OFF"? → Set to "ON". If the CLEAN indicator does not light up, it is time for parts replacement. Consult with us (See the contact information on the back cover). 		
The toilet bowl surface repels water or tends to get dirty (TCF996 only)		 The toilet bowl surface needs to be cleaned. → Clean with a toilet brush or the like using commercially available hydrochloric acid-based or inorganic acid-based detergent. For daily cleaning, use neutral detergent. Is "AUTO OPEN/CLOSE (LID)" set to "OFF"? → When AUTO OPEN/CLOSE is set to "OFF", UV light does not work while the lid is open. 		
		Others		
Trouble		Please check	Ref Pag	
Water is leaking from the plumbing connections		 If any nuts in a connection are loose, firmly tighten them with a tool such as monkey wrench. → If the water leak does not stop, close the shutoff valve and seek repair. 		
The display on the remote control goes out		The display goes out when no button on the remote control is pressed for 1 minute or more.		

46

The deodorizer is not

working

	Others			
Trouble	Please check			
The top unit is unstable	 There is clearance between the toilet seat cushion and the bowl unit for activating the seat switch. When you sit on the toilet seat, the toilet seat subsides slightly to activate the seat switch. 			
The top unit makes a sound	When moving away from the bowl unit after use> You may hear the sound of the remaining water being drained. When not using the product> When the cleaning feature is not used for about 8 hours, you may hear the sound of auto wand cleaning.			
Water splashes up when using the toilet	 The water in the bowl unit that is used to mask the smell of excrement is the cause of the splashing. →Adding a layer of toilet paper on the surface of the water can slightly dampen splashing. 			
When cleansing, you hear a squishing sound underneath the floor	 Flush the toilet and check for sounds coming from the discharge pipe. Use a device that maintains the necessary toilet water level. 			
When flushing, you hear a gurgling sound	 When the toilet is flushed together with waste material, the sound is a result of air, waste material and water being pulled through the system. 	-		
There is a black stain on or around the bowl unit	 Ammonia in urine may cause black stains. → If urine has splashed on the bowl unit or floor, wipe it immediately. 			
There is black or pink slime on the toilet bowl surface	 It is a result of growth of airborne fungal spores or bacteria that feed on filth on the toilet bowl. → Clean with (non-abrasive) neutral toilet detergent. 			
There are water droplets on the bowl unit surface	 Condensation occurs when the humidity is high, and there is a significant difference between water and room temperatures. →Wipe off droplets with dry cloth. (May also occur on condensation-proof bowls when the difference between room and water temperatures exceeds 15°C and the ambient humidity reaches 80%.) 			
[POWER] (blue) and [ENERGY SAVER] (orange) LEDs on product main body are blinking	 ● If the [POWER] (blue) and [ENERGY SAVER] (orange) LEDs blink at the same time, it is time to perform Descaling mode. → Please peroform Descaling mode. 			

Specifications

		Item		TCF996	TCF994	
Rated power supply				AC 220 - 240V, 50Hz		
Rated power consumption				844 - 854W		
Maximum power consumption				1527 W (When the water supply temperature is (0 °C))		
Туре				Instantaneous		
Power cord	l length			1.0m		
Water prote	ection level			IPX4		
	Flush volun	ne ^{*1}		Flush: 6.0L, Light flush: 3.0L		
Bowl unit	owl unit Water supply system			Concealed	tank system	
	Flush type			Cyclone flushing	(Washdown type)	
			Rear cleansing	Approx. 0.27L	- to 0.43L/min.	
		Spray volume	Rear soft cleansing	Approx. 0.27L	. to 0.43L/min.	
	Cleansing		Front cleansing	Approx. 0.29L	. to 0.43L/min.	
		Water tem	perature	Adjustable temperature range: OFF, about 30°C to 40°C		
		Heater capacity		1200 - 1428W		
		Safety device		Temperature fuse		
		Backflow prevention device		Vacuum breaker, Air gap according to EN1717		
Functions		Warm air te	emperature ^{*2}	Adjustable temperature range : About 35°C to 55°C		
i unotiono	Warm	Airflow volu	ume	Approx. 0.29m ³ /min.		
	air dryer	Heater cap	acity	200 - 238W		
		Safety dev	ice	Temperature fuse		
	Heated	Surface temperature		Adjustable temperature range: OFF, about 28°C to 36°C (About 26°C when auto energy saver is in operation)		
	seat	Heater cap	acity	55 - 65W		
		Safety device		Temperature fuse		
		Method		O ₂ deodorizing		
	Deodorizer	Airflow volu	ume	Approx. 0.16 m ³ /min.		
Power consumption			sumption	Approx. 5.3W		
Water supply pressure				Minimum required water pressure: 0.1MPa (dynamic), Maximum required water pressure: 1.0MPa (static)		
Water supply temperature				0°C to 35°C		
Working ambient temperature				0°C to 40°C		
Dimensions				W 423mm x D 67	75mm x H 529mm	
Weight				About 44kg (Top unit: about 11kg, bowl unit: about 33kg)	About 43kg (Top unit: about 10kg, bowl unit: about 33	

*1 Volume when used in combination with the dedicated concealed tank.

*2 Temperature around the warm air outlet measured by TOTO.

• When disposing of this product, please follow your local or state guidelines for proper disposal.

Warranty

Important User Guidance Information

LIMITED TWO YEARS WARRANTY

- 1. TOTO warrants its products to be free from manufacturing defects under normal use and service for a period of two(2) years from the date of purchase. This warranty is extended only to the ORIGINAL PURCHASER.
- 2. TOTO's obligations under this warranty are limited to repair or replacement, at TOTO's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with this OWNER'S MANUAL. TOTO reserves the right to make such inspections as may be necessary to determine the cause of the defect. TOTO will not charge for labour or parts in connection with warranty repairs or replacements.

TOTO is not responsible for the cost of removal, return and/or reinstallation of products.

- 3. This warranty does not apply to the following items:
 - a) Damage or loss sustained in a natural calamity such as fire, earthquake, flood, thunder, electrical storm, etc.
 - b) Damage or loss resulting from any unreasonable use, misuse, abuse, negligence, or improper maintenance of the product.
 - c) Damage or loss resulting from removal, improper repair, or modifi cation of the product.
 - d) Damage or loss resulting from sediments or foreign matter contained in a water system.
 - e) Damage or loss resulting from the quality of water in the region where the product is used.
 - f) Damage or loss resulting from improper installation or from installation of a unit in a harsh and/or hazardous environment.
- 4. This warranty gives you specific legal rights. You may have other rights which vary from country to country.
- 5. To obtain warranty repair service under this warranty, you must take the product or deliver it prepaid to a TOTO service facility, together with a letter stating the problem, or contact a TOTO distributor or product service contractor, or directly to a TOTO sales office. If, because of the size of the product or nature of the defect, the product cannot be returned to TOTO, receipt by TOTO of a written notice of the defect shall constitute delivery. In such case, TOTO may choose to repair the product at the purchaser's location or pay to transport the product to a service facility.

This written warranty is the only warranty made by TOTO. Repair or replacement as provided under this warranty shall be the exclusive remedy available to the purchaser. TOTO shall not be responsible for loss of use of the product or for other incidental, special, or consequential damage or expenses incurred by the purchaser, or for labour or other costs due to installation or removal, or costs of repairs by others, or for any other expense not specifically stated above. Except to the extent prohibited by applicable law, any implied warranties, including that of merchantability or fitness for use, are expressly limited to the duration of this warranty. Some nations do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damage, so the above limitation and exclusion may not apply to you.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, which prevent potential negative effects on the environment and human health.

Only discard discharged batteries. They should not be disposed of with household waste, but rather at appropriate collection sites or at the product retailer.

MEMO

MEMO