

# Installation Manual: Aqua-lava NE-2000 Series Bidet seat with Type AD Air gap

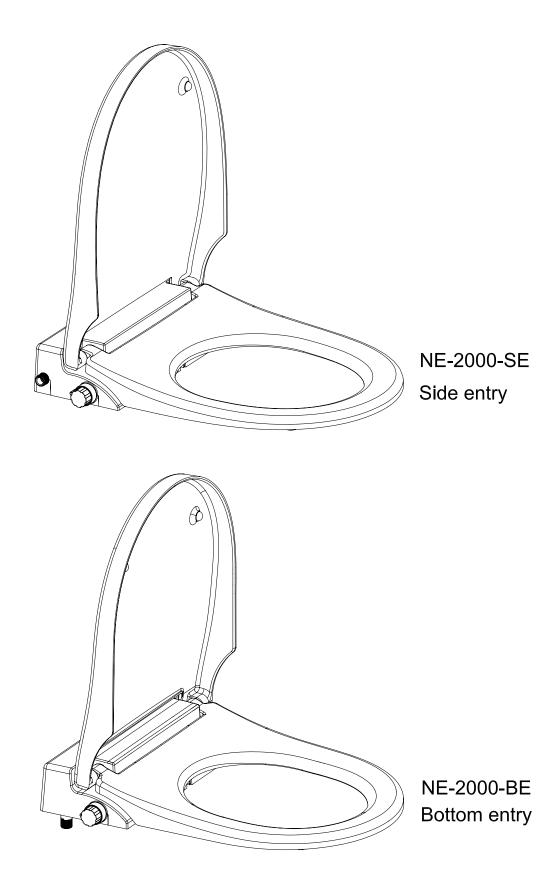


<sup>\*</sup> When the water supply pressure is greater than 0.4Mpa, a pressure limiting device is recommended.\*


# Fittings Checklist

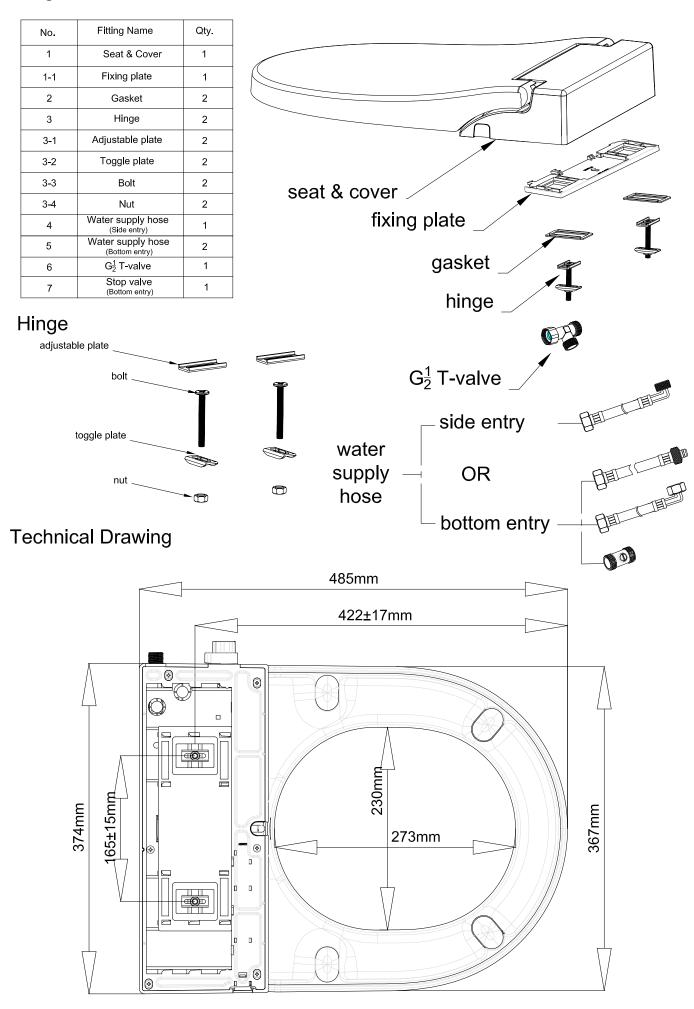


## **Installation Steps**

- 1.Check whether the seat cover fits the toilet, and the distance between two mounting holes of the toilet. Make sure no significantly deformation of the toilet.
- 2. Make sure there is a water connector near the toilet / cistern for supplying water to the bidet.

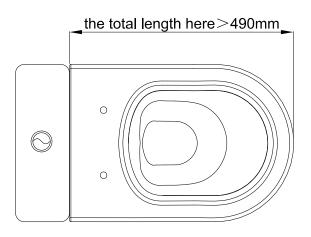


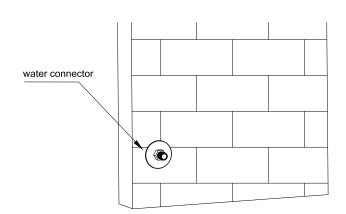


## 3. Remove the fixing plate from the seat cover

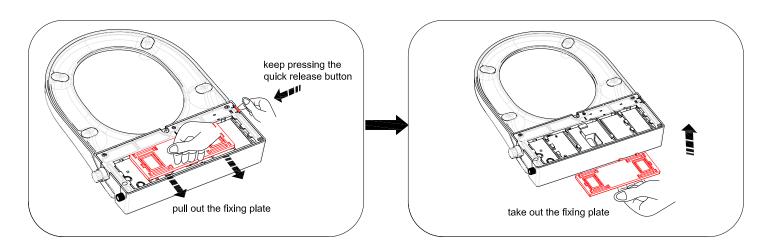


# 4. Installation of hinges

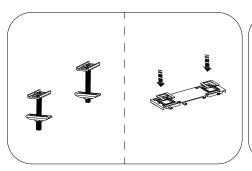


① Assemble hinges and fixing plate according to the figure above

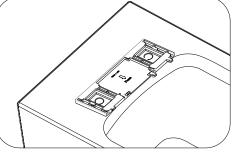


② Install the fixing plate with gaskets on the toilet and align the mounting holes

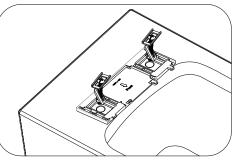

③ Tilt the toggle plates of the hinges and insert the hinges into the toilet mounting holes

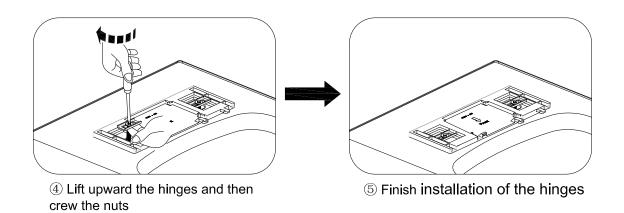


# 5. Installation of water supply hose

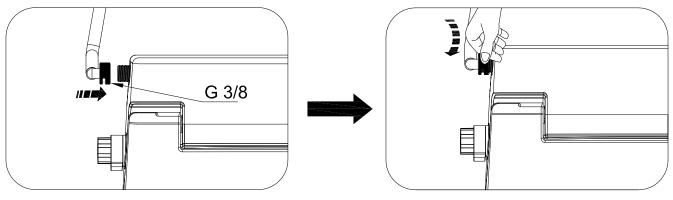


Connect G 3/8 connector with water inlet joint of seat cover

#### Rotate the nut clockwise until it is locked


## 6.Installation of seat cover

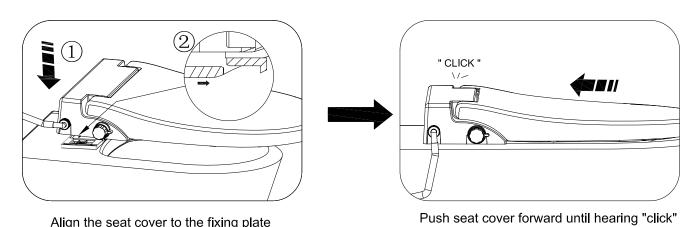

Align the seat cover to the fixing plate

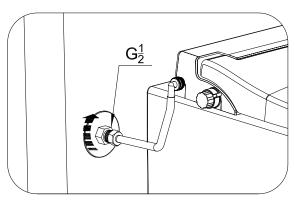


Connect the water supply hose to the water connector on the wall

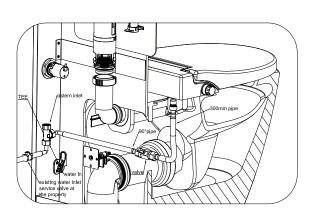


Hidden connection for bottom entry unit with supplied T piece, flexible hose with valve


## Washing mode

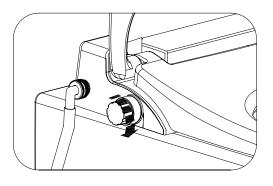




Rotate the knob in the clockwise direction to activate washing function. The washing volume can be adjusted by rotate the knob. ( Note: be careful with the flow rate when the washing starts to avoid the uncomfortable washing experience.)

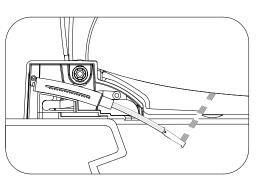

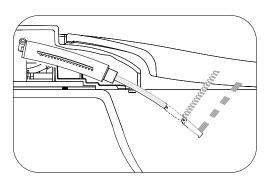





Rotate the inner knob ring in the clockwise direction to adjust the nozzle position

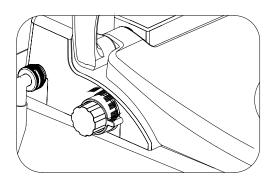


# Cleaning

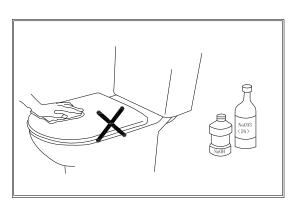


Do not use the cleaning agents of NaCo3、NaOH to clean the seat cover and just clean the seat cover with soft cloths.

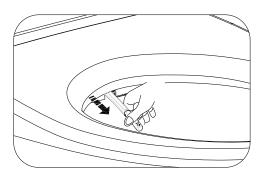


Remove the nozzle regularly for cleaning or replace it with a new one

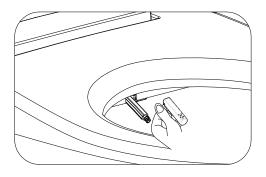


### Remove the seat cover

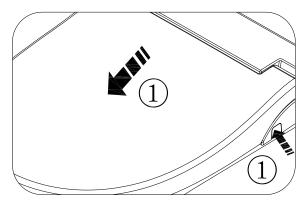

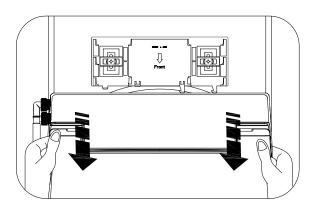


Press the quick release button meanwhile pull the seat cover backward

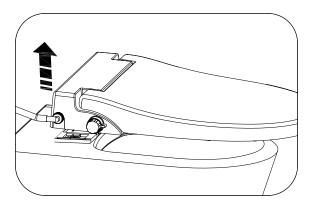


Then take the seat cover up to remove it


## Remove the hinges

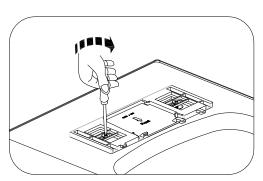


Loosen the bolt in counter clockwise direction by screwdriver

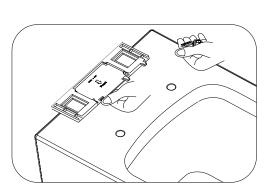

Remove the fixing plate

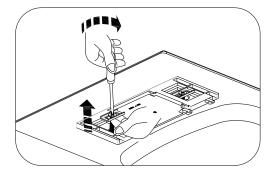

Keep lifting upward the adjustable plate and continue rotating the bolt counter clockwise until the screw is fully removed

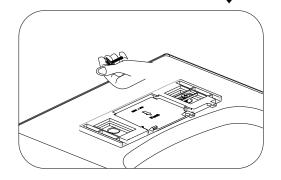

Take out the bolt ,toggle plate, and screw nut, then loosen another hinge